

User manual for MDVR-HD



Function Buttons:

- **Power** Turn on/off the device
- **OK** Confirm selections
- **Up/Down** Select options or zoom camera
- **Mode** Switch camera mode
- **Menu** Access menu for current mode

General Use:

1. Press **Power** to turn on the device.
2. Hold **Power** for 3 seconds to turn off the device.
3. Pressing **Mode** while not in a menu will cycle through the camera states, indicated by a symbol in the top left corner:

Photo Taking	Camera
Video Recording	Video Camera
Voice Recording	Microphone
Playback	Play Symbol(▶)
4. On any of the recording states, press **OK** to begin or stop recording. Once stopped the media will be saved into a file on the SD card.
If there is no more room on the SD Card, the oldest files will be overwritten automatically.
5. There are menus for each recording mode, and a general system menu. To access a mode's menu, switch to that state with the **Mode** key, then press **Menu**.
6. To access the system menu enter any mode menu, then press **Mode**.

Video Recording Settings

Movie Size

Change the recorded resolution for videos

Date Stamp

Choose whether to record a timestamp onto the video

Motion Detect

Motion Detect will start recording whenever motion is detected, and continue 2 minutes after motion has stopped.

Loop Rec

Loop Recording involves saving separate files at regular intervals. Turn it on/off.

Loop Time

The interval at which to save each file during Loop Recording.

Video Sound

Turn sound on/off during recording.

Photo Settings

Resolution

Set the resolution for photos.

Quality

Select the quality for image compression.
(Normal-Small files; Very Good-Large files)

Exposure

Set the exposure (brightness) of your photos.

Date Stamp

Print a datestamp on all photos.

Playback Settings

Lock

Lock/Unlock a file to prevent it from being written over.

Delete

Delete a file from the device.

Slide Show

Begin a slideshow using these options.

Voice Memo

Add or delete a voice memo.

Start-up Image

Select an image for when the device starts-up.

System Settings

Sounds

Turn on/off individual sound sources (Use **Mode** to set)

Power frequency

Set screen update frequency.

Power Save

Turn device off after some time.

Panel Protect

Blacken screen after some time to prevent image being "burnt" into the LCD.

Date&Time

Set the date and time.

Language

Set the language.

TV Out

Choose TV-Out format (NISC/PAL)

Start-up Image

Choose a start-up image.

Format

Clear SD card.

IR LED

Turn on/off the IR Leds (nightvision). When "on" the camera will enter night recording when dark.

Reset All

Reset options to default.

Version

Show Software information