



Alarms & Surveillance

STANDALONE WIRELESS MOTION SENSOR ALARM

INSTRUCTION MANUAL

Model No: WGWMSA


www.watchguardalarms.com.au



RoHS



Controls

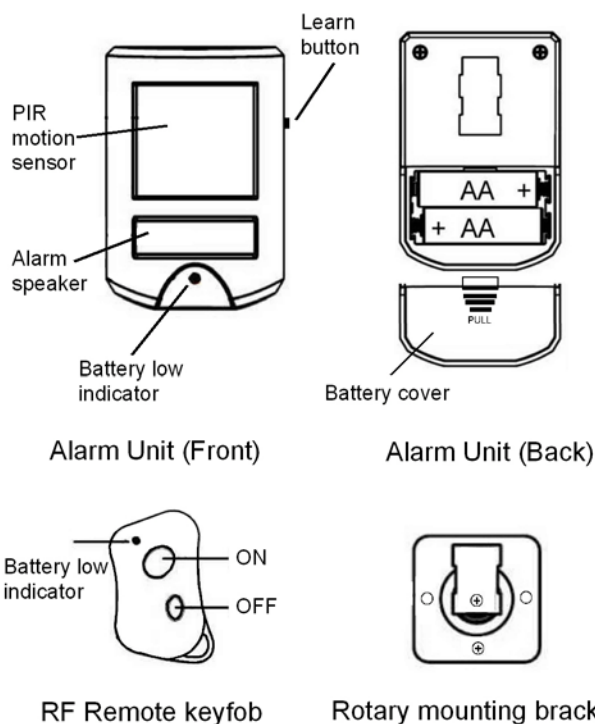

Learning Key Fob(s) to Main Unit

Learning the remote(s) is done by pressing the "Learning Button" on the sensor and the "on" button of the key fob simultaneously until you hear **BEEP** 2 times, which means the remote has been successfully learnt into the sensor. Repeat this process to learn additional remotes into the sensor (maximum of 3 remotes per sensor)

To delete a remote:

Remove all the batteries from the sensor and reinstall them. Begin learning the required remotes into the sensor, using the steps above.

***For additional remotes, please contact your local distributor (details overleaf)**

Please note:

Every time the batteries are removed either from the sensor or key fob, the remote(s) need to be re-learnt into the sensor.

Operation

When exiting the protected area

Simply press 'ON' button of key fob within the distance of 30 meters (Line of Sight) to arm the unit. A confirmation tone "**BEEP**" will indicate that the alarm is armed and you have 30 seconds to vacate the area. After that, if motion is detected the alarm will sound.

When entering the protected area

Simply press the 'OFF' button of the key fob within the distance of 30meters (Line of Sight) to disarm the unit. Please note that when entering the area, there is a **short beep** to indicate that motion has been detected and a 4 second delay to allow the main unit to be disarmed.

Detection range

The motion detector of the alarm unit has a 7-metre (21ft) detection range with angles of 60° vertical and 110° horizontal approximately.

Care and maintenance

To clean the case, simply use a soft slightly damp cloth with water and wipe dry immediately.

CAUTION: Never use chemicals to clean the case, as they may cause damage to the plastic and cause the alarm not to function.

Troubleshooting

The unit does not sound when the batteries are installed

Ensure that the batteries are in proper polarity

The alarm does not arm

Check key fob red light comes on when the 'ON' or 'OFF' buttons are pressed

The red light on the alarm unit is ON

This is an indicator of 'Low Battery', which means the batteries need replacing.

The red light on the key fob does not light up when the buttons are pressed

Remove the battery cover of the key fob and replace the battery.

Battery precautions

When using this product follow these precautions at all times.

- Use only the appropriate size batteries
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Incorrect polarity may cause damage to the alarm.
- Do not mix different types of battery such as Alkaline and Carbon-zinc or old batteries with new.
- If the alarm is not used for long periods of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not recharge batteries not intended to be recharged as they can overheat and rupture. (Always follow the manufacturer's directions.)

Battery installation

Alarm Unit

- 1 The battery compartment is accessed from the rear of the alarm unit by removing the battery cover.
- 2 Insert two (2) 'AA' size Alkaline batteries (not included), following the polarity of diagram.
- 3 When the last battery is inserted the alarm will **BEEP**, indicating that the batteries are installed correctly.
- 4 Close the battery cover.

Low Battery Warning

The 'Battery Low' indicator will turn on when the batteries need to be replaced.

Remote Key Fob

The key fob uses 1 x A27S battery (included). If the red LED remains 'ON' without pressing the buttons, this indicates a low battery, simply remove and replace with a new battery.

Installation

- 1 Place the alarm in the desired location, using swivel wall mount bracket provided.
- 2 Fix bracket to the wall using the screws supplied.

Please note that this alarm can also be used free standing.

WARRANTY CARD

This product is guaranteed against faulty materials and workmanship for a period of twelve months from the date of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections.

*For any customer query or in the unlikely event of a product failure,
please contact your local office as set out below.*

DO NOT RETURN THE PRODUCT TO THE RETAILER

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

PRODUCT: STANDALONE WIRELESS MOTION SENSOR ALARM

Model No: **WGWMSA** Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt.

Please do not post to the retailer.

FOR ADDITIONAL REMOTES PLEASE CONTACT YOUR LOCAL DISTRIBUTOR.

See contact details below for distributor locations.

Contact details - 9:00am - 5:00pm (Mon - Fri)

RhinoCo Technology Australia Head Office:

9 Hannabus Place, McGrath's Hill, NSW. 2756 Australia, Phone: +61 2 5477 4708 Fax: +61 2 4577 4885

UK Sales Office

Unit 6 Ubique Park, March Way,
Battlefield Enterprise Park, Shrewsbury,
SY1 3JE
Phone: (+44) 0845 644 5421

Italy Sales Office

24 Piazza Garibaldi, 98034 Francavilla
Di Sicilia (ME) Italy
Phone: (+39) 0942 989241
Email: sales@rhinoco.it

South Africa Sales Office

Route 21 Corp/Park, Unit C3 Prospect Close,
311 Regency Drive, Irene Ext 30, South Africa
Phone: (+27) 12 345 6626
Email: sales@rhinoco.co.za