



2 CHANNEL MULTI-PURPOSE RECEIVER



Rhino Part N°	Description
RCX	• 2 Channel receiver • Keyless Entry
RCXi	• Keyless Entry with immobilisation relay (includes automotive installation parts)

• Hardware Version: CLX Version 4.00 • Software Version: CL2000 •

Instructions



RhinoCo Technology

ABN: 74 001 621 610

Head Office:

9 Hannabus Place, McGraths Hill, NSW 2756
AUSTRALIA

Ph: +61 (2) 4577 4708 Fax: +61 (2) 4577 4885

Web: www.rhino.com.au

Email: sales@rhino.com.au

16 Pages Total

Introduction

This product is designed to be **simple and easy to use**. It has simple wiring connections and can be used in a **variety of applications**. Primarily, this product can be used to remote control your car, garage door, home alarm system, or your electric gate. The list of items you can interface into is almost endless.

The unit is supplied with 2, dual button remote controls which have an **operating range of approximately 80 metres** (line of sight – subject to environmental conditions).










The remote controls for this unit operate using **code hopping technology**. This is otherwise known as anti code grabbing or anti scanning type. This leading edge technology prevents unauthorised copying of your remote control. This technology sends a unique and different code each time any of the remote control buttons is pressed.

Other features include:

- ✓ Long life lithium batteries included with the remote controls.
- ✓ Compact receiver module, which can fit in the smallest of spaces.
- ✓ High performance and reliable super-heterodyne receiver. This ensures there is no frequency drift.
- ✓ SSR™ Solid State Remote controls – no tuning capacitor. More durable and reliable.
- ✓ New modular design. Plug in module. Easy to install, replace or service.
- ✓ Learning code receiver. Can store up to 15 remote controls in total.

Packing List

Following, is a list of the parts included with your receiver.

Description	Appearance	Re-order code	RCX	RCXi
RCX Receiver module		RCXTH	Yes	Yes
8 way wiring harness		HARNESS08	Yes	Yes
2 button remote controls (2 pieces)		GTTX	Yes	Yes
Instruction booklet		INSTRUCTIONS	Yes	Yes
Warranty Cards		WTYCARD	Yes	Yes
1 Amp diode		1N4007	No	Yes
40 Amp relay		40ARELAY	No	Yes
LED, Loom and Bezel		LEDLOOM5	No	Yes
Toggle Switch and Loom		TOGSWLOOM	No	Yes
Blinker Relay (pre wired)		REL01LOOM	No	Yes

Installation

Notes for Automotive Installation

- Plug the wiring harness in to the module last, after all connections have been made.
- Check the vehicles electrical system thoroughly **before** commencing installation.
- The installation should be as well hidden as possible - to maximise the system security.
- **Solder** all connections, and then **insulate** with insulation tape.
- Use a **multi - meter** to verify any wires nature.
- The immobilisation override switch is an option at the customer's discretion. It will disable the immobilisation system. Its location should be known to the installer/owner only. When the switch is **open** the system will be **disabled**.

IMPORTANT: If the installer does not have a concise knowledge of the vehicle's electrical system, it is strongly advised not to aimlessly probe to find the necessary wires. Doing so may damage your vehicles electrical system. Consult with your vehicle's manufacturer, or a qualified Auto Electrician. Rhino accepts no responsibility if an installer wires the product incorrectly or damages the vehicle during installation.


Notes for RCX Home / Generic Installation

- Plug the wiring harness in last, after all connections have been made.
- Check the alarm panel manual or other ancillary device manual thoroughly **before** commencing installation.
- The installation should be as well hidden as possible - to maximise the system security.
- Use a **multi - meter** to verify any wires nature.


IMPORTANT: If the installer does not have a concise knowledge of the alarm panel, garage door controller, or other ancillary device, it is strongly advised not to aimlessly probe to find the necessary wires. Doing so may damage the system. Consult the manufacturer or a qualified alarm technician. Rhino accepts no responsibility if an installer wires the product incorrectly or damages an ancillary device during installation.

Automotive (RCXi)

Installation

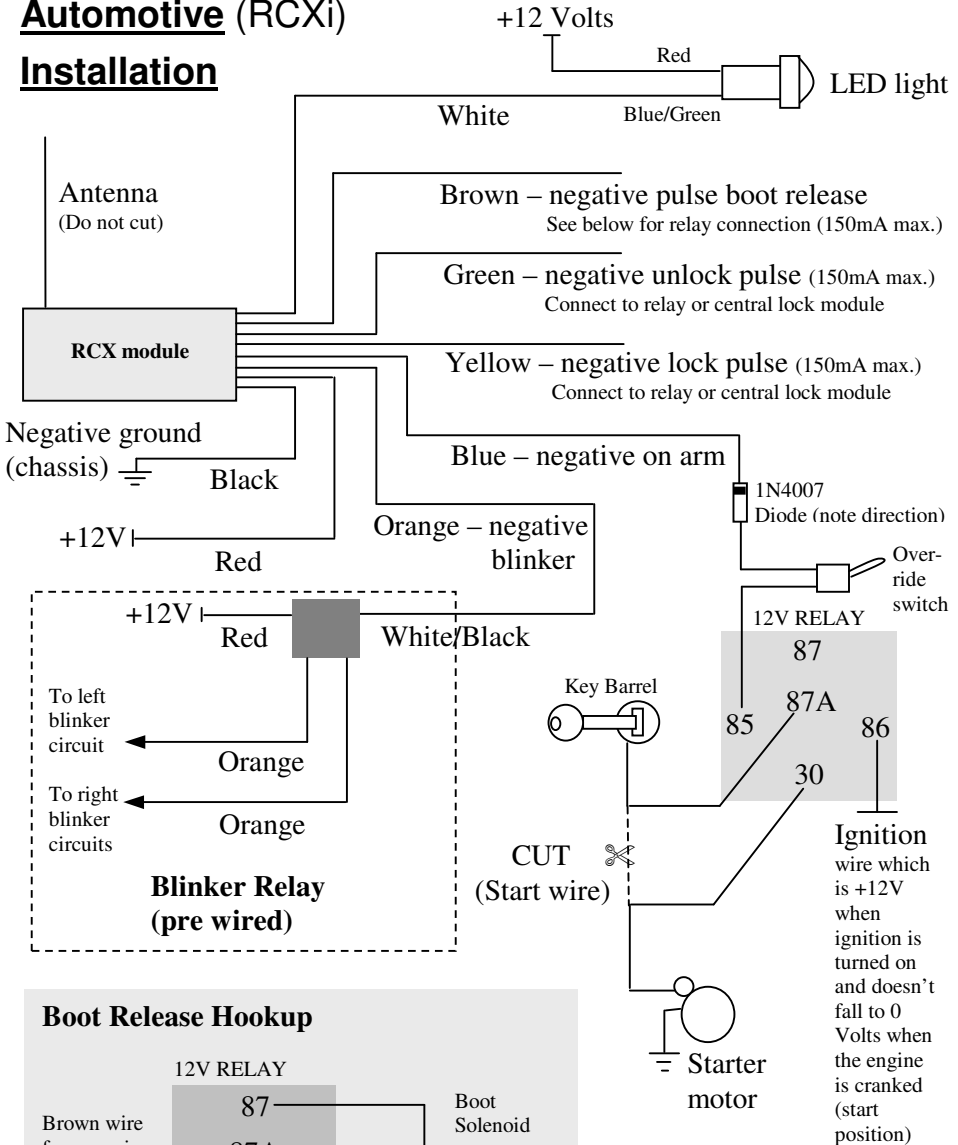

Boot Release Hookup

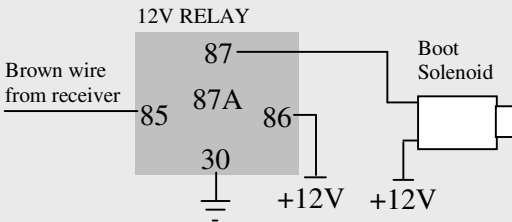


IMPORTANT!


All outputs from the RCX(i) are rated at 150mA (max.)

General Purpose 1 Channel or 2 Channel Installation

(RCX)

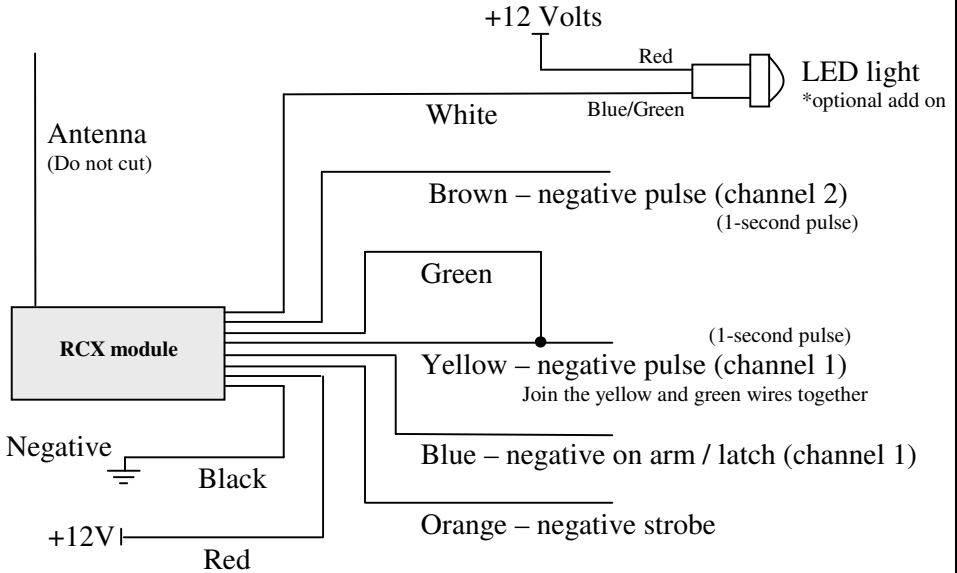

Relay Hookups

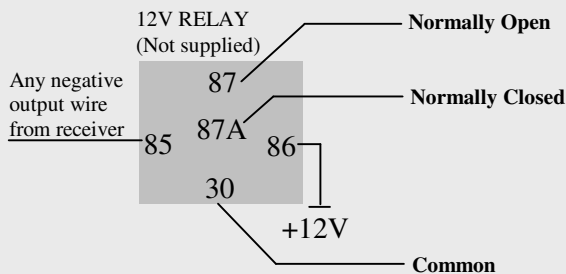

IMPORTANT!


All outputs from the RCX(i) are rated at 150mA (max.)

Additional Wiring Information (Generic - RCX)

20cm WHITE WIRE	- This is the antenna wire. Do not cut. This wire must be as vertical, straight, and must not be enclosed within any metal casing, which the module may be mounted in. The full length of the antenna must extrude the metal enclosure.
RED WIRE(s)	- Connect to constant fused +12 Volt DC supply (minimum 1 Amp) i.e. usually +AUX on an alarm panel or a constant 12 Volt supply. WARNING: Do not connect power to the red wire until the green and yellow wires are fully insulated. If the red power wire touches the green or yellow wire, damage will be caused to the outputs. This is not covered under warranty.
BLACK WIRE	- Negative Ground. Connect this wire to the negative (GND) or usually -AUX on an alarm panel. This is usually where the negative supply for detectors are connected also.
GREEN and YELLOW WIRES	- Negative pulse Channel 1 (1 second pulse). Refer to diagrams. (150mA maximum rating)
ORANGE	- Negative strobe output. Refer to strobe connection diagrams.
BROWN	- Negative pulse Channel 2 (1 second pulse). Refer to diagrams. (150mA maximum rating)
BLUE WIRE	- This wire is a negative out when armed / latch channel 1 (150mA maximum rating). IMPORTANT: Do not short this wire to 12V.
WHITE WIRE	- Connect to the negative wire (blue/green) from the LED. Connect the positive side (red) of the LED (not supplied) directly to the +12V supply. (The RCX has a 1k resistor built into the output)

Harness Connection


The harness must be plugged in as shown otherwise the unit will not operate. This should be done last when all the wires have either been connected or insulated.

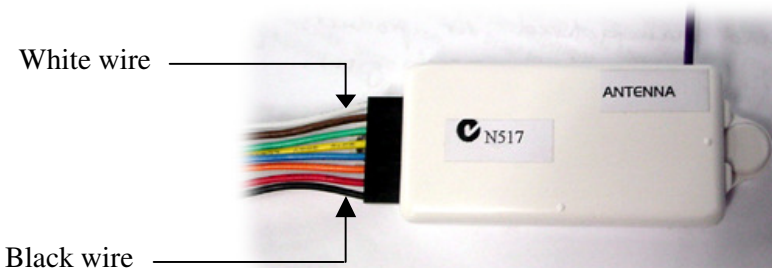


** If you plug the harness in the wrong way it will not damage the module.*

Strobe Connection Diagrams (Generic – RCX)


For negative strobe outputs drawing less than 150mA

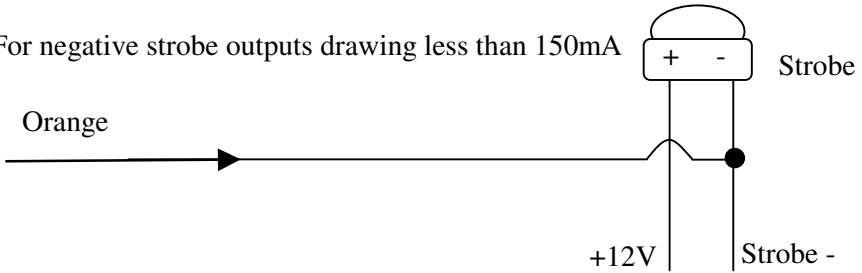


For positive strobe outputs, use 40A Relay

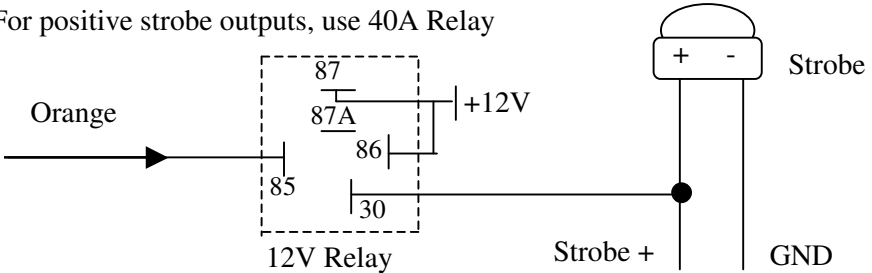

For negative strobe outputs drawing more than 150mA

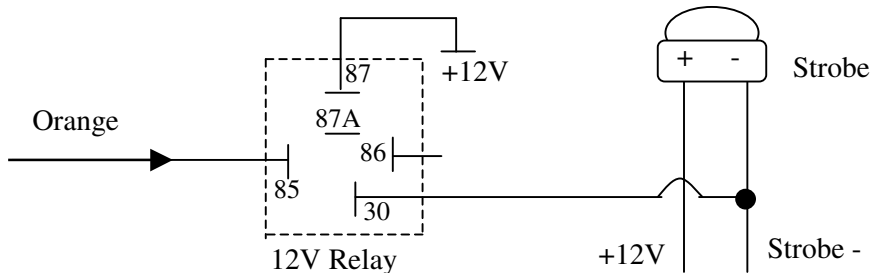

Blinker Relay Diagram (Supplied with RCXi only)

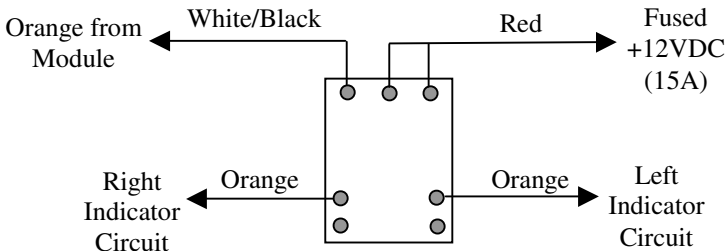

Operation

Normal Operation (Automotive – RCXi)

Red button



Press button 1 to **lock and unlock** the vehicle.

When the vehicle is locked this will immobilise the vehicle. The dash LED light will begin flashing and the indicators will flash once.

Unlock Lock

When the vehicle is unlocked the dash LED light will stop flashing. The indicators will flash twice and vehicle can now be started.

Green button



Press button 2 to open the **boot** (if connected). This operates independently and will not lock or unlock the doors. It will not enable the vehicle to be started if the vehicle is already immobilised.



Normal operation (general purpose – RCX)

As this receiver may be wired to many different devices, we suggest that you fill in the spaces below.

Red button


Press button 1 to operate Channel 1.



This will _____

Green button

Press button 2 to operate Channel 2.

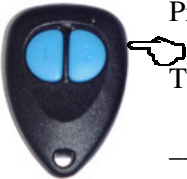


This will _____

Installers notes to the user

Adding remote controls

Your RCX / RCXi incorporates a unique code learning system. This enables extra remotes to be added with ease if necessary. You can utilise a **maximum of 15 remote controls** if required.

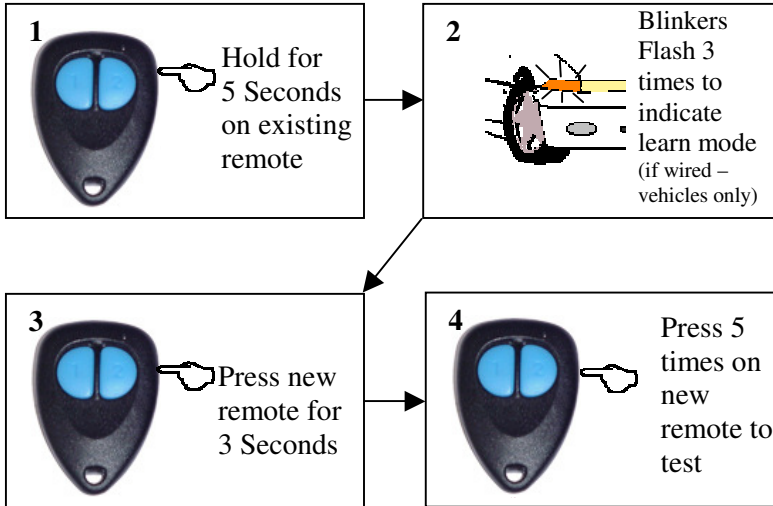

To learn in a new remote control press and hold button 1, of an existing (learnt in) remote control, for approximately 5 seconds or until the blinkers begin to flash again. Immediately after the blinkers begin flashing or after holding the button 1 of the existing remote control, release that button. Immediately after releasing the button of the existing remote control press button 1 of the new remote control for 3 seconds then 5 times for a 1 second duration each time. The new remote control should now work. If this doesn't work the first time re-try this procedure from the beginning.

Over-ride



If you have no working remote controls to operate your system because they have been lost or are not working then you may over-ride the RCXi system (if the over-ride switch has been fitted). The switch should be in a hidden position and switched in the opposite direction to enable you to start the vehicle.

The RCX, if wired to a control panel, can usually be overridden by using the hardwired keypad. It is important with any installation to ensure that an override procedure is in place in the event that all remote controls for the system are lost or are not operating.

Lost Remotes?

If you are unable to find lost remotes you should have the system sent back to the Rhino Service Department for resetting. This is important to ensure that no unauthorised entry can occur from someone using the lost remote control(s).

Contact the qualified installer for removal and refitting of the system. For technical assistance contact Rhino Technical Support (details below).

Testing & Specifications

- We recommend using a multi-meter to test any wires.
- All outputs are open collector switching negative.

NORMAL OPERATION RATINGS

PARAMETER	MINIMUM	TYPICAL	MAXIMUM
Supply current @ Vcc = 12V	-	7mA	13mA
Supply voltage (Vcc)	10V	12V	14V
Operating Temperature (°C)	-20	+25	+85


ABSOLUTE MAXIMUM RATINGS

PARAMETER	MINIMUM	MAXIMUM
Storage Temperature	-55	+150
Supply Voltage, Vcc Max.	0V	+16V

Service and Technical Support


Replacing the remote control batteries

The diagram shows how the remote control is assembled. This may help when it comes time to replace the batteries in your remote control.

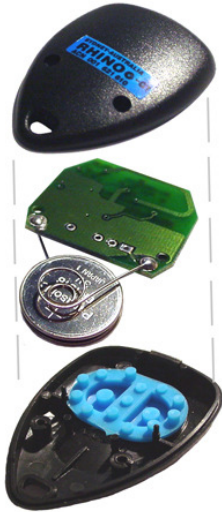


A small philips head (#1) screw driver is required to remove the 2 screws that hold the case together. Once the screws are removed you can then disassemble the case and replace the batteries.

The batteries must be installed the correct way (see diagram below).

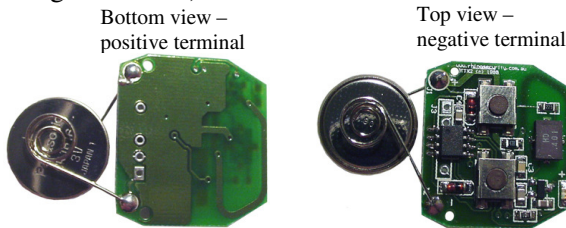

Both batteries are placed between the 2 terminals. The positive side of each battery faces the bottom. The positive side of each battery is indicated by a + symbol. Be sure not to touch the face of the new batteries with your fingers. Handle only from the edge so that the batteries make good contact with each other and the terminals.

Side view with
batteries installed

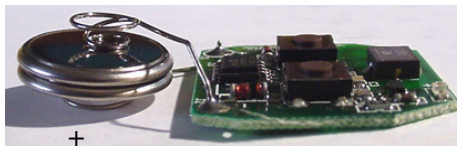

Replacement batteries are available from Rhino Electronic Security. Contact Rhino Technical Support on the number below.

Rhino Part #	Battery type	Description
TX3V	CR1616	3 Volt button cell Lithium battery

Technical Service & Support

For further technical help regarding this product contact our Technical Service & Support Team. When contacting us quote the part number, RCX or RCXi, to the technician and have all relevant information handy.



Rhino Electronic Security Technical Service & Support Team

9 Hannabus Place, McGraths Hill, NSW 2756 AUSTRALIA

Ph: (02) 4577 4708 (within Australia)

Fax: (02) 4577 4885 (within Australia)

Ph: +61 (2) 4577 4708 (International)


Web: www.rhinosecurity.com.au

Email: service@rhinosecurity.com.au

Additional Diagrams


All relays depicted are changeover type.

Connecting to a Rhino Central Locking Kit (CLK)

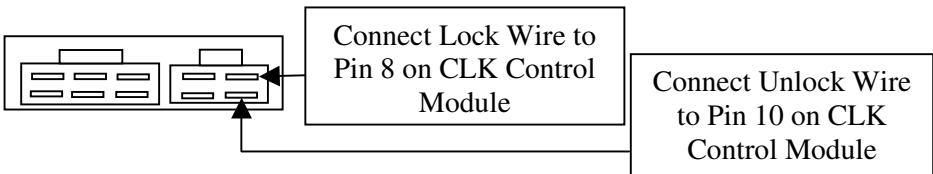


Installing a New Motor


(Often required in vehicles that has factory locking but have no motor in the driver's door, or you would like "keyless entry" on driver's door)

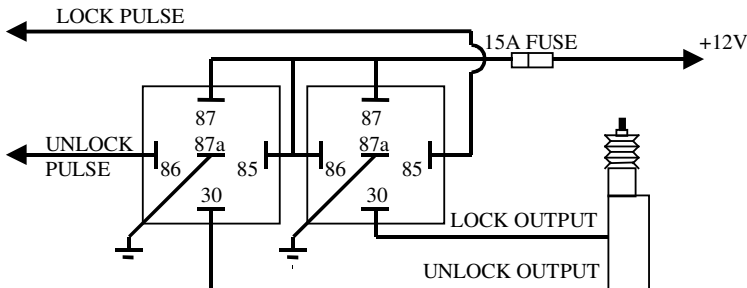

Interfacing to “Positive Pulse” Central Locking Systems

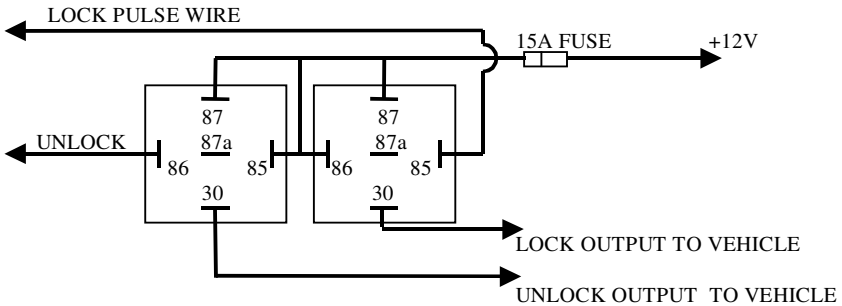


Negative Trigger Existing Central Locking System (low current)

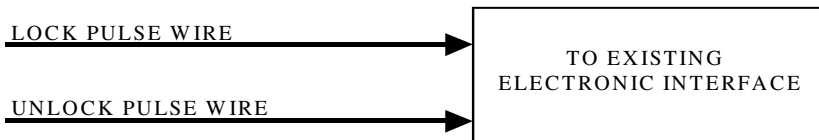

Additional Central Locking hookup diagrams available from Rhino Technical Support

- Secure unlocking (similar to VS/VT central locking system).
- Positive at rest then going negative or negative at rest then going positive.
- Other various central locking hookups.
- Wiring colours and locations for various model vehicles.

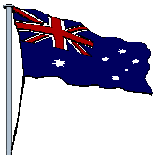

We thank you for buying an Australian designed and engineered product from an Australian company



The Rhino Team

www.rhino.com.au