


# CENTRAL LOCKING CONNECTION DIAGRAMS FOR RHINO GTS CAR ALARM


The Rhino GTS Alarm Features Onboard Central Locking Relays.

## FOR NEGATIVE PULSE CENTRAL LOCKING SYSTEMS

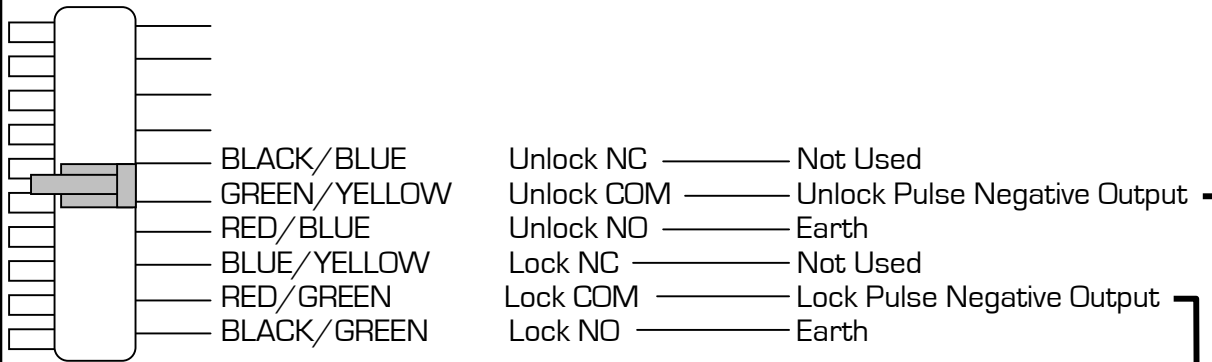


## FOR CONNECTION TO RHINO CENTRAL LOCKING KIT

Configure wiring as above & refer to diagram below:

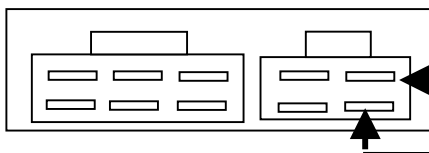


NOTE: Red/Blue & Blue/Yellow must be at earth for correct operation of central

**INSTALLING A NEW MOTOR:** Often required in vehicles that have factory locking but have no motor in the driver's door, or you would like "keyless entry" on driver's door.

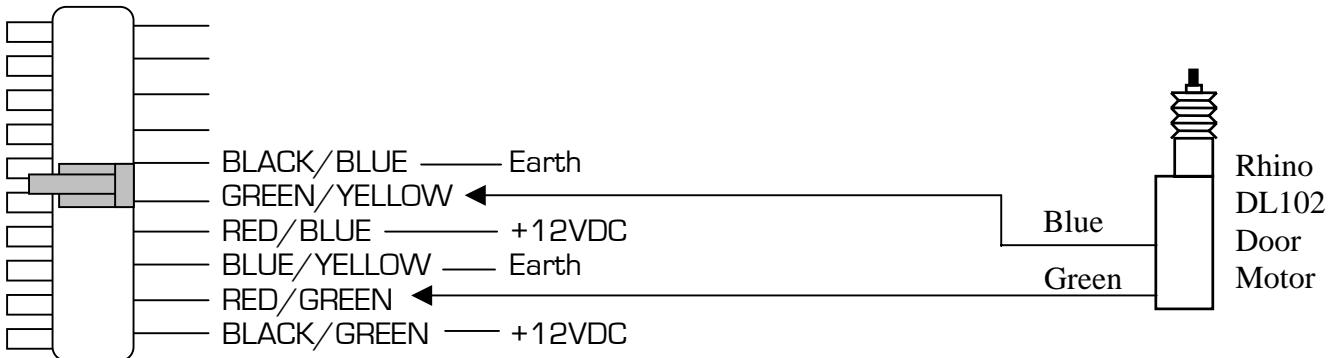


## FOR POSITIVE PULSE CENTRAL LOCKING SYSTEMS

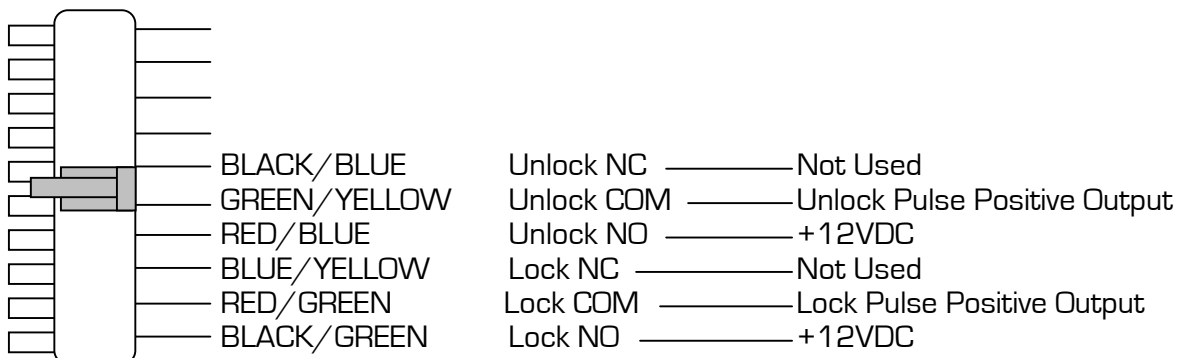

**FOR POSITIVE AT REST THEN GOING NEGATIVE**  
**FOR NEGATIVE AT REST THEN GOING POSITIVE**

Connect Red/Blue & Black Green to Earth  
 Connect Red/Blue & Black Green to +12VDC

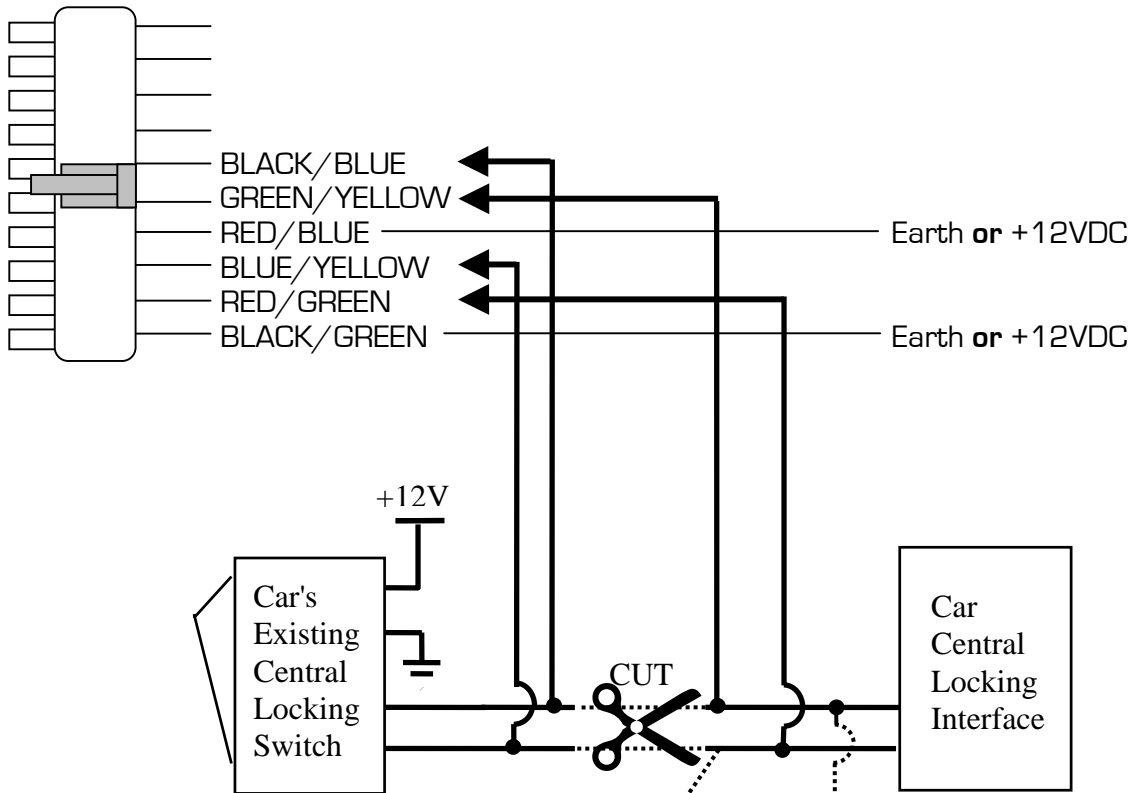

**For Floating Switches: Neither +12V or Earth at Rest**

Connect 2 additional relays as shown below & connect Red/Blue & Black Green to +12VDC

