


---

**STANDALONE H.264  
DIGITAL VIDEO RECORDER**

---

User manual

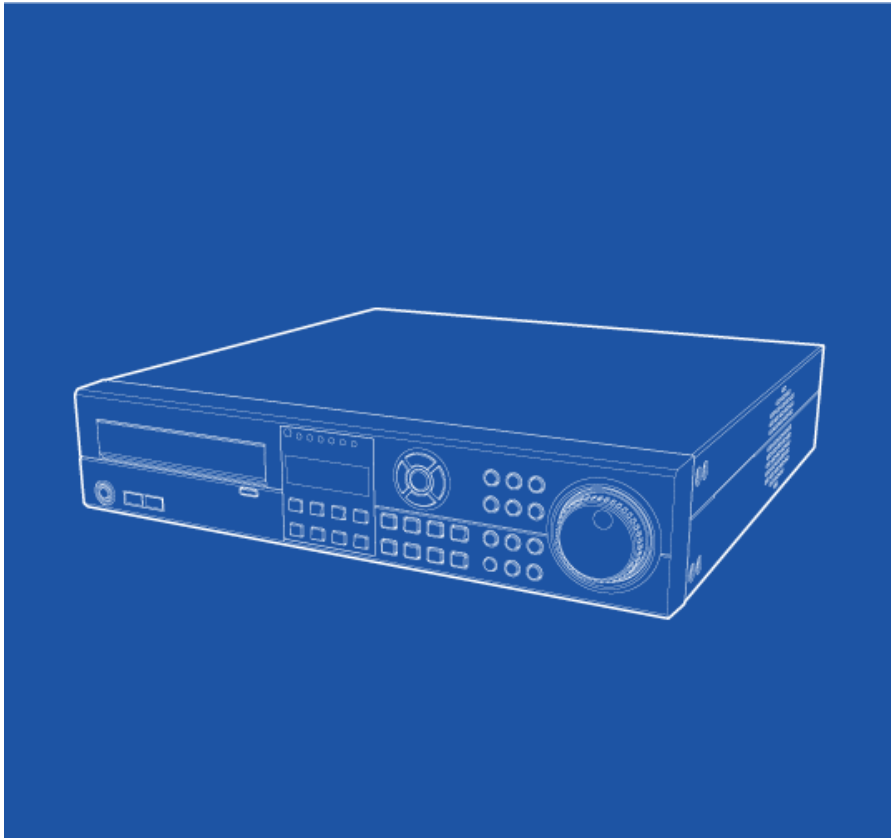

## Before usage

The User manual is for DVR installation and operation.

The user who install the device first or Qualified Personnal, before instllating DVR, has to read user manual carefully and follow warning instrunctions avoiding malfunction of operation or product failure. Refer all servicing to qualified service personnel or suppliers while install and set the DVR. Keep these operation instructions handy for future reference.

## Warning for safety

The user has to keep in mind of followings for safty usage and well-operation.

- Do not shock during installation or Product carried
- Do not expose to shock or vibration.
- Do not move while the product is operating.
- Do not plug out while the product is operating.
- After power off, clean the DVR only dry towel.
- Do not put out Plug code, touch power plug with wet hands.
- Do not place heavy object on power code, it may cause power code damage, occure fire or electric shock
- Install stable place and keep proper tempeture, if install the DVR in sealed place, it may cause a fire.
- Do not install humidty place, electronic hazard, moisture.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptables.
- Recommend to use protect device to prevent failure through blackout or lighting.
- Do not expose direct sunlight and install near radiators, heat registers or other apparatus that produce heat.
- Do not place near flammable spray or any heat source, cause of flammable material, it may cause a fire
- Do not damage, Blend, twist, modified, pull out, heat power code, it may cause damage power code or outlet.
- Do not insert the metals such as a coin, a hair pin, a piece of iron or flammable Material such as a paper, a matchstick, etc. in the DVR, It may cause a fire or an electric shock
- Contact to Supplier after turn off the DVR, when odor smoke or smell in the DVR,

## Approved HDD list

Capacity	Manufacturer	HDD	Model	F/W Ver.
160G	Western Digital	HDD 160G SATA	WD1600AAJS	
			WD1600AAJS	22L7A0
250G	Western Digital	HDD 250G SATA	WD2500AAJS	
			WD2500AVJS	63B6A0
			WD2500AAKS	
			WD2500AVVS	63L2B0
			WD2500AVVS	73L2B0
			WD2500AAJS	00L7A0
	Hitachi		WD2500AAJS	22B4A0
			HDS721025CLA382	
			HCS5C1025CLA382	
	Seagate		HDS721025CLA382	
			ST3250318AS	CC38
ST3250312CS	SC13			
320G	Western Digital	HDD 320G SATA	WD3200AVVS	63L2B0
	Seagate		ST3320418AS	CC38
500G	Western Digital	HDD 500G SATA	WD5000AVVS63ZW80	
			WD5000AAKS	00A7B2
			WD5000AVVS	63H0B1
			WD5000AVVS	63M8B0
			WD5000AAKS	00V1A0
			WD5000AVDS	63U7B0
	Seagate		ST3500418AS	CC38
			ST3500312CS	SC13
	Hitachi		HCS5C1050CLA382	
			HDS721050CLA362	
750G	Western Digital	HDD 750G SATA	WD7500AACS	
			WD7500AACS	

1TB	Western Digital	HDD 1TB SATA	WD10EACS	
		HDD 1TB SATA	WD10EADS-00L5B1	
		HDD 1TB SATA	WD10EARS	00Y5B1
		HDD 1TB SATA	WD10EADS	00L5B1
	Seagate	HDD 1TB SATA	ST31000528AS	CC38
		HDD 1TB SATA	ST31000322CS	
	Hitachi	HDD 1TB SATA	HCS5C1010CLA382	
		HDD 1TB SATA	HDS721010CLA332	
1.5TB	Seagate	HDD 1.5TB SATA	ST31500341AS	
		HDD 1.5TB SATA	ST31500341AS	CC1N
	Western Digital	HDD 1.5TB SATA	WD15EADS	00R6B0
		HDD 1.5TB SATA	WD15EARS	00Z5B1
2TB	Western Digital	HDD 2TB SATA	WD20EARS	00S8B1
		HDD 2TB SATA	WD20EARS	00Z5B1
	Seagate	HDD 2TB SATA	ST32000542AS	
	Hitachi	HDD 2TB SATA	HDS722020CLA330	

(February. 2011 )

### Approved DVD-RW list

ODD	Manufacturer	DVD RW	MODEL	F/W Ver.
ODD	Samsung Electronics	DVD RW	SH-S203B	F/W : B
	Samsung Electronics		SH-S223Q	F/W : Q
	LG Electronics		GH22NP20	
	LG Electronics	DVD-RW	GH24NS50	ROM VER : XP01
	LG Electronics		GH22NS50	ROM VER : TN02

(February. 2011)

**[Waring] Please use approved HDD avoiding malfunction of operation, if the user want to use other HDD, Please contact to supplier and check the HDD is available or not.**

- Contents -

**1. Overview**

· Feature .....8  
· Application .....8

**2. Installation**

· Package contents .....9  
· Rear panel .....10  
· Video Input .....11  
· Loop out .....11  
· VGA output .....11  
· RS-485 connection (PTZ Camera) .....12  
· RS-485 connection (External keyboard connection) .....12  
· Alarm out connection .....13  
· Sensor input connection .....13  
· RJ-485 port (Internet connection) .....14  
· USB port .....14  
· Call menu .....14

**3. System Operation**

· Controll button .....15  
· Front LCD Icon .....18  
· Front direction key .....19  
· Mouse .....20  
· Icon .....20  
· Remote Controller ID Set-up .....21

**4. System Setup**

· Information .....23  
· Time / Date .....24  
· Password .....25  
· Hard Disk .....26  
· Default set-up .....27  
· Up grade .....27  
· Button set-up .....28  
· Log out .....29

· Serial Port set-up(RS-485) .....	29
<b>5. Display</b>	
· OSD .....	30
· Split mode .....	30
· Auto Sequence .....	34
· Display control .....	35
<b>6. Network</b>	
· IP Address .....	36
· Alarm alert set-up .....	37
<b>7. Camera</b>	
· Camera set-up .....	40
· Camera Title .....	41
· PTZ set-up .....	41
· How to use PTZ .....	42
<b>8. Recording</b>	
· Recording .....	47
· Schedule Recording .....	48
<b>9. Event</b>	
· Sensor .....	50
· Alarm .....	51
· Motion detection .....	52
· SPOT output .....	53
· Audio output .....	54
<b>10. Search</b>	
· Search .....	55
· Search by calendar .....	56
· Search by Date / Time .....	57
· Search by Event .....	58
· First serch / Last search .....	59
· How to control Playback .....	59

<b>11. Back up</b> .....	61
<b>12. Appendix</b>	
· Specification .....	63
· Product Warranty .....	65

## Chapter 1. Overview

### Feature

The DVR employs H.264 video recording 4ch, 9ch, 16ch channel input and S-VHS and Spot output simultaneously. The DVR has mirroring function, mirroring HAD record and display regardless of unexpected physical shock or damage.

### Feature

- Control Pan / Tilt by using Mouse or Joystick
- 2 USB ports in front board for easy back-up
- ODD Back up available (Option)
- Full Frame transfer under GIGA network available
- Multi language
- Dynamic IP Internet access available
- Dual-Stream network transfer available
- TV output, VGA output, S-VHS, Spot output available simultaneously
- Support D1 resolution each channel independently
- Support several PTZ protocol
- CMS software
- Provide software for Smart phone, IP viewer, Network Viewer


### Application

- ✓ Bank, ATM unit, Supermarket, Convenient store and other public places.
- ✓ Private homes, Apartment, Jewelry shop, Commercial compound and other places where it needs anti theft surveillance system.
- ✓ Warehouse, Production line and other places where evidence is needed after any event happened and to analyze the situation.
- ✓ Where to monitor sites remotely



## Chapter 2. Installation

### Package contents

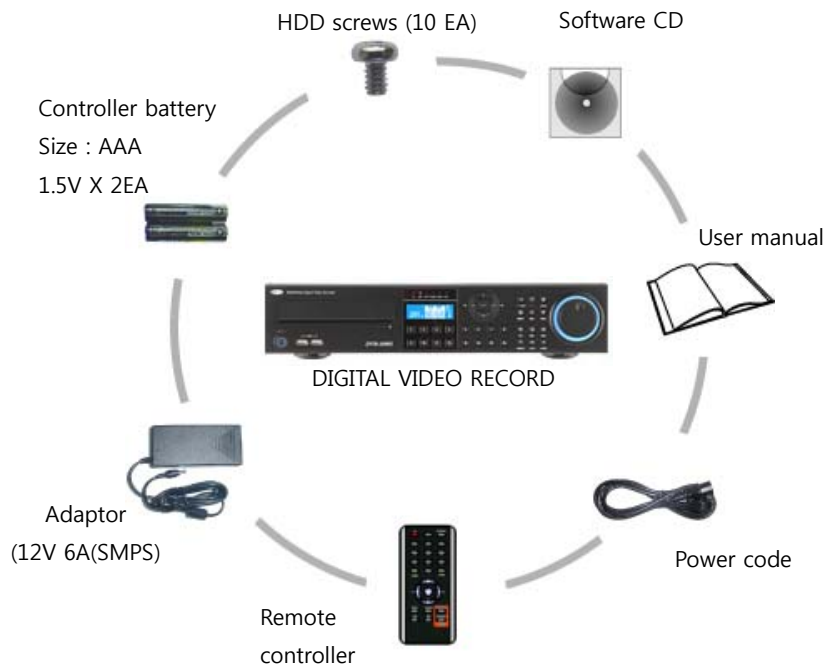


Package contents are consist of as followings.

- ✓ Digital Video Record (1EA)
- ✓ HDD screws (10 EA)
- ✓ Software CD (1EA)
- ✓ User Manual (1EA)
- ✓ Power code (1EA)
- ✓ Remote Controller (1EA)
- ✓ Controller Battery AAA (1.5V 2EA)
- ✓ Adaptor (12V 6A 1EA)


**[Note]** Make sure Package contents when you purchase system.  
Not included any package contents, Please contact to Supplier

## Rear panel

It doesn't need specific equipment to install DVR. Refer to each parts explanation in user manual.

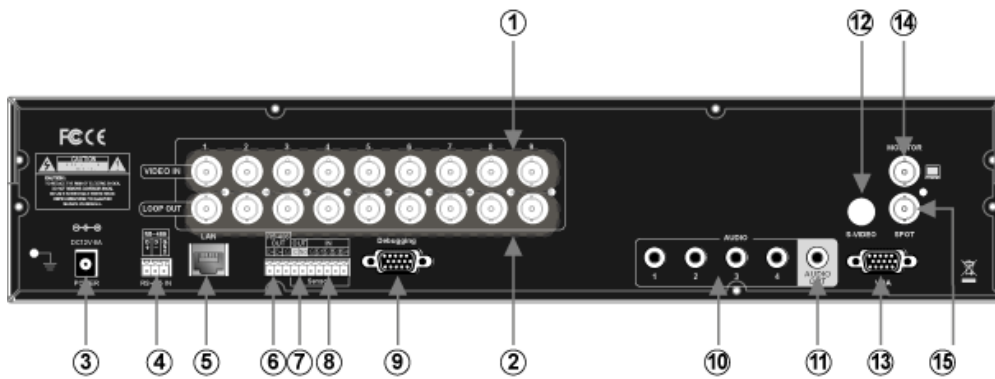


(9 Channel rear panel)

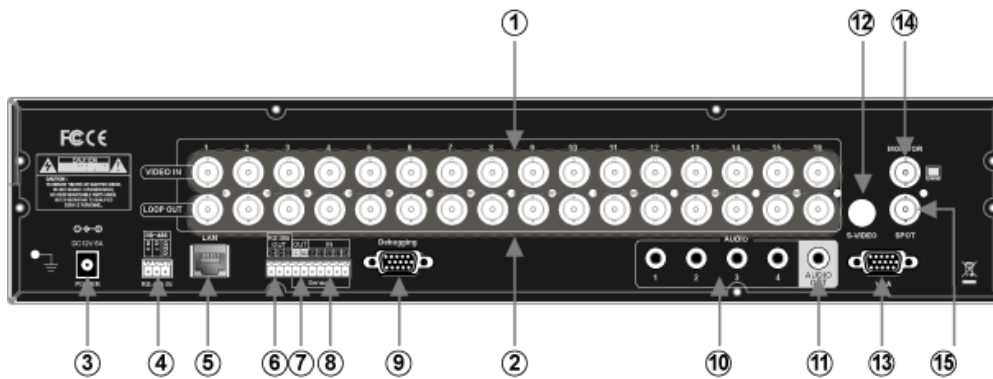

(16 channel rear panel)

- [1] Video input    [2] Video Loop out    [3] Adaptor connector jack    [4] RS-485 Input
- [5] RJ-45(For Network)    [6] RS-485    [7] Alarm output    [8] Sensor input
- [9] Serial Port (For Debugging)    [10] Audio input    [11] Audio output    [12] S-Video output
- [13] VGA output    [14] Composite Monitor output    [15] Spot out

## Video input

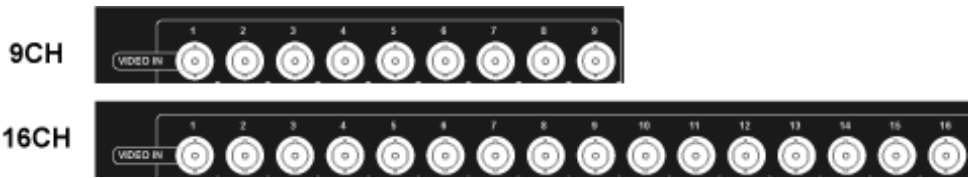


Connect Coaxial cable from Video source to BNC Video in connector.

## Loop Out (Video source output)




Used to transfer a video signal to other video devices.

## VGA Output

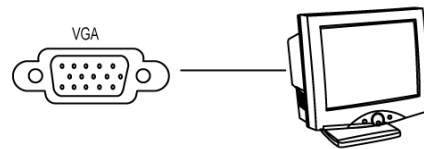


Use VGA input type of LCD monitor and CRT monitor.

## RS-485 Connect (PTZ Camera)

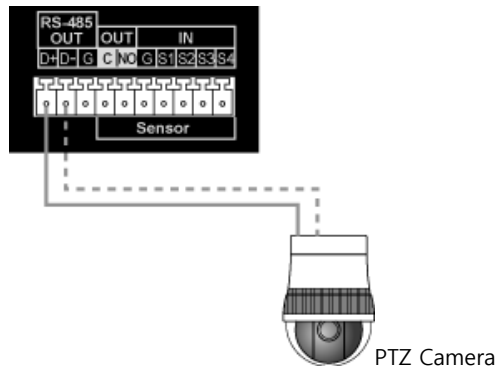

Before connecting PTZ, check PTZ Protocol whether compatible protocol or not in DVR, if it is, connect cables as configuration.


## RS-485 Connection (External Keyboard Connection)

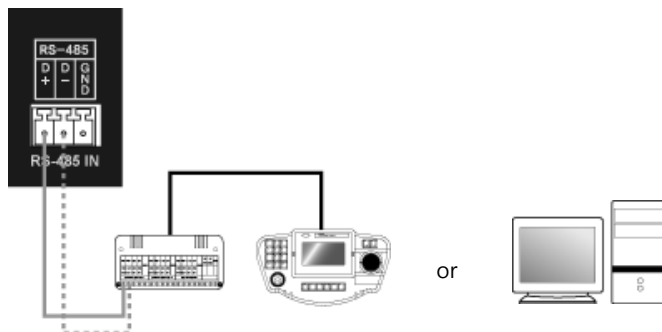

The DVR is controlled by specific keyboard, Please ask supplier to purchase keyboard. You can find Keyboard installation in keyboard user manual.

**[Note]** The user controls DVR through Keyboard or external devices such as PC, 99pcs of DVR is controlled by provided DVR protocol.


## Alarm output connection

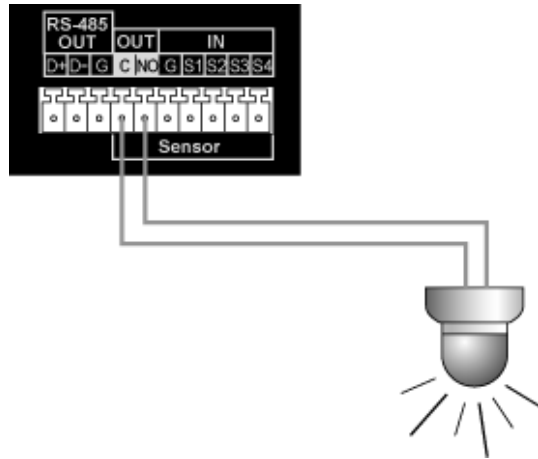

Support 1 alarm output, connect cable same as above.


**[Note]** Provides simple On/Off switching by using relay

## Sensor input connection

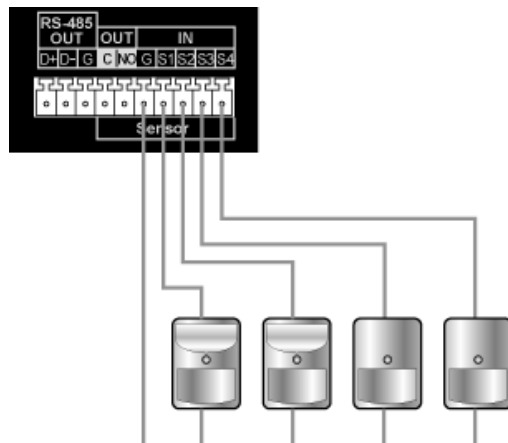

Provide 4 Sensors, connect sensor same as above.

## RJ-45 Port (Internet connection)



Connect network through 10/100/1000Mb Ethernet connector.  
Available remote surveillance and remote search by network between DVR and computer. .

## USB port



Support 2 USB ports in the front panel, it uses for Firmware upgrade, Back up, Mouse.

## Call menu

Available Menu set-up through Menu button in front panel, mouse and Remote controller.  
Keep in mind of user manual to overall set up system.

- **Call menu by "Menu" button.**

Press "Menu" button in front panel.

("ESC" button also use Call Menu function –"ESC" go to previous status.)

- **Call menu by Remote controller**

Press "SET UP" button in Remote Controller.

- **Call menu by Mouse**

Click Right button in the mouse, select desired menu in Pop-up menu.

## Chapter 3. System


### Control button



( Front control button )



( Mouse menu Icon )

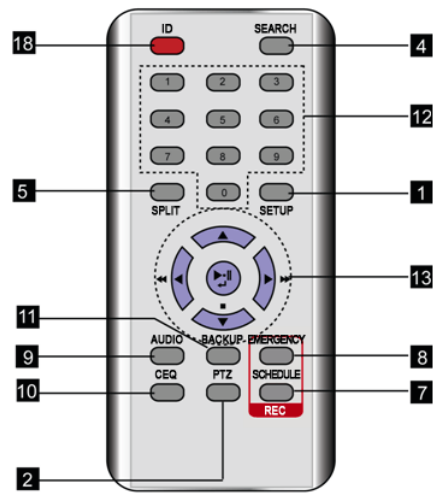

(Remote button)

[1] SET UP

Call Menu

Goes to previous status in menu (Click Right button in Mouse).

[2] PTZ

Select desired channel to control PTZ camera, then press PTZ button to call PTZ menu.

[3] IR receiver

Receive the IR signal from remote controller.

[4] Search

Display recoding image.

[5] Split

Switch Full or Quad view, Max quad of screen according to DVR, Press direction button in 9ch, 16ch DVR

"▲" Press up button, change to different multi quad screen.

- 9 Channel DVR : Click "SPLIT" Button -> Revert to 9 quad mode
- 16 Channel DVR : Click "SPLIT" Button -> Revert to 16 quad mode



[6] Log out (Key lock function)

- To Log out, pressing "Lock" Button in front panel.  
"Key lock" is same as "Log out" in mouse menu.

[7] Schedule Record

- Start to record image according to setting schedule.  
Press button to start schedule recording in emergency record mode.

[8] Emergency Record

- In case of emergency, press "EMERGENCY" button to start recording forcibly regardless of the recording schedule with setting resolution and recording frame in all channel.  
Avoiding HDD waste, have to change to "Schedule recode" mode

[9] Audio

- Select Audio Channel, can hear desired Audio.

[10] Sequence

- Auto Sequence each channel will be conducted in Live according to setting dwell time between camera. Set [MENU]-> [DISPLAY] -> [Auto Sequence] .

[11] Back up

- Back up recording image.

[12] Channel / Numeric button

[13] Refer to "Front direction key".

[14] LED indicator



Inform status of operation through lighting.

- IR : Turn LED off, receiving remote data.
- COMM : Turn LED off during communication..
- WARNING : "Beep" sound and Turn LED off, when Error occure in HDD.

- LOCK : Turn LED on, Press "LOCK" button (Log out status).
- NETWORK : Turn LED on, remote access through internet.
- REC : 1) Turn LED on, recording image with schedule mode.  
2) Turn LED off, recording image with emergency recording mode.

[15] Error list

In case of system error, the error icon appears on screen with beep sound. Press "ENTER" button, stopping beep sound and display Error list.



Icon will be shown in the status bar.

- Main Disk 1 Error : 1<sup>st</sup> HDD error in HDD disk
- Mirror Disk Error : Mirror HDD error in HDD disk.  
(Unless use mirror, revert to "Main Disk 2 Error")
- DNS Connection Error : Dynamic IP file
- SMTP Connection Error : "E-mail notification" fail.
- Disk Full : HDD disk is full.  
(Replace to HDD disk or setting "Overwrite" in Menu-Hard disk )

[16] Indicate function when select required Icon in Mouse menu.


[17] Split group setting

Split 4 mode in DVR-0800S and DVR-1600S, next group (5ch, 6ch, 7ch, 8ch) is changed whenever press right direction button "▶" in front of panel or remote controller.

[18] Multi channel

Sequence split screen in live automatically.

### Front LCD Icon

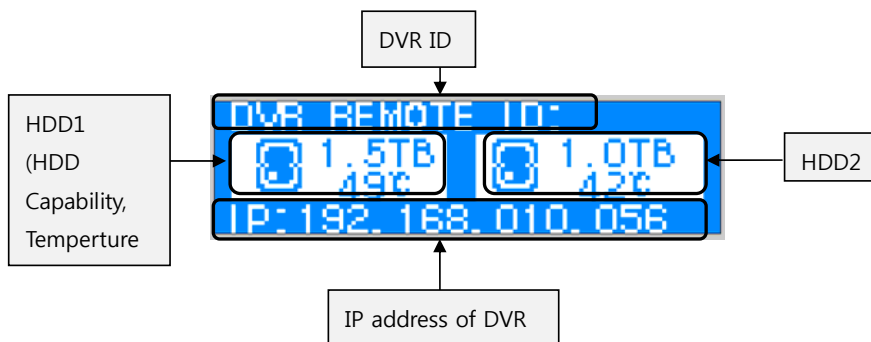

HDD Icon



HDD operation



No HDD or Error



Mirror status

## Front Direction Key

[1] Left Direction key

- Move left in Menu
- Used for backward or search fram in play

[2] Up Direction key

- Move up in Menu
- Multi Channel

[3] Play / Pause / Confirm key


- Confirm revised menu.
- Use to pause or resume the screen.
- Log-out (Press for a second)
- Inform Error list and "Beep" sound off (Only operate in Play)

[4] Right Direction key

- Move right in menu
- Used for quick forward search in Play


[5] Down direction key.

- Move down in menu
- Stop button in Play
- Status and Camera Title ON/OFF

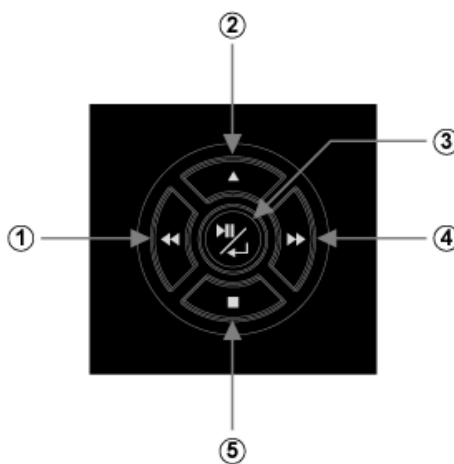


## Mouse

Most of DVR function can be controlled by mouse for PC users.

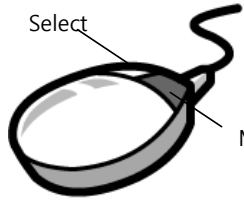


Call menu,  
Move previous stage

Click right button in mouse to open main menu.  
Click ◀ or ▶, to decide desired setting.

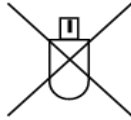

PS/2 MOUSE

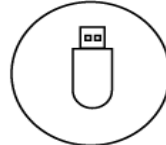

USB MOUSE

## Icon

Indicate exist status in Live



HDD capability status



Emergency recording



Schedule recording



Key Lock status



Auto sequence



Internet status



Network status



Sensor status



Motion detection



Video loss status



Record



De-interlace

## Remote controller ID set-up

DVR ID and Remote controller ID have to set same ID to control several DVR by using one remote controller. (DVR ID is compatible with Keyboard (DCK-500A) )



[1] Check system ID then change setting

- MENU > System > Information > Remote ID (Range : 0 ~ 99 )

To control several DVR by one remote controller, have to set remote ID each DVR separately.  
(Factory default "00")

**[Note]** If set same ID in each DVRs, it may not set desired DVR by controller.

[2] Remote controller usage

Set same ID between remote control ID and desired DVR ID, if it is different between DVR and remote controller ID, DVR doesn't operate well by using remote controller.



Appear above screen pressing "ID" button of remote controller in live, press Controller No button same as registered DVR ID.

- DVR ID=0 : Indicate exist DVR remote ID.
- "00" : Remote controller ID, press same DVR ID in controller No button and press "OK"

**[Warning]**

**It has to be set same ID between DVR remote control "ID" and remote controller "ID"  
If DVR isn't controlled by remote controller properly, please check DVR remote "ID"  
and Remote controller "ID"**

**When compatible with keyboard, it makes sure DVR ID.**

## Chapter 4. System Set up

### Information



[1] Remote ID : Support ID remote controller, One remote controller can control several DVRs by setting Remote controller ID according to DVR. (ID Default : 0, Max :99)

[2] Mouse sensitivity : Mouse sensitivity level can be adjusted at user's convenience.  
(Basic Level 1; Level 1 < Level 2 < Level 3 increasing reaction speed)

[3] Language : Support Multi language (English,Japanese,Russian,Italiano,Roman,Korean)

[4] Indicate version information.

- H/W Ver. : Indicate Haward Version
- S/W Ver : Indicate Software version
- N/W Ver : Indicate Network version
- UI Ver : Indicate UI version
- UI Date : Indicate UI developed date

[5] NTSC / PAL

Select NTSC or PAL as country and different frame and resolution according to NTSC or PAL.  
(Resolution and frame is refered to Appendix. )

[6] Mac address: Mac address of DVR.

[7] Web Code : Identification for remote monitoring of Web browser.

## Time / Date



[1] Time / Date : Set Time and Date.

[2] Date format : Select date format according to country.

- ASIA : YYYY/MM/DD --> 2006/05/31
- US : MM/DD/YYYY --> 05/31/2006
- EURO : DD/MM/YYYY --> 31/05/2006

[3] Time server : It helps time set of DVR automatically by synchronization of time server service.

- Sync Cycle : Select the period to synchronize between DVR and time server.
- Time Server : Input the URL of server
- GMT : Select GMT time zone where user located in

### [Note]

- GMT zone and time server name are searched easily on internet browser.
- In case DVR is not connected with internet or time server name is not collect, DVR gives beep sound and error message. Press "CONFIRM" button to off sound and pop-up a error message.

[4] Summer time set: Set Summer time "YES", it is adjusted summer time according to desired period in DVR.



## Password

Set authority password according to user, Administrator (Admin) has all Authorities to manage all function of DVR.

Authority is consist of "Configuration", "Search", "PTZ setting", "Hard Disk", "Back up", "Record key", "Netowrk convert"



[1] User ID : it is consist of "Admin", "User1~7", "Admin" select all function automatically, "User" can select desired function.

[2] Group : Specified authorities according to group type.

- Admin : Available all functions.
- Power User : Only available "Configuration", "Search", "Back-up".
- User : Select desired functions.

[3] Password : Enter new password in selected ID. (Max. 8 Characters available)

**[Note] Initial password is "11111111" with every ID.**

[4] Function: Select authorities according to ID

[5] Network Convert: Select channel doesn't display through network.

## Hard Disk

It is HDD set up menu. It has to set carefully avoiding system error or malfunction of recording.



[1] Hard Disk1 : Set first Hard disk usage.

- Main Disk : Use first HDD
- Mirror Disk : Use Mirror HDD
- None : Not use

[2] Hard Disk2 : Set second Hard disk usage.

- Main Disk : Use second HDD
- Mirror Disk : Use Mirror HDD
- None : Not use

[3] Optical Disk Drive : Setting ODD for BackUp, Indicate "RW Write".

[4] Erase : Format exist HDD disk.

[5] Total HDD capability: Indicate total HDD capability (Used HDD capability / available HDD capability)

[6] Over-Write : When enable, HDD is overwrite the oldest existing recorded data once the HAD is full.

[7] Auto Delete : Set the recording dates from 1~120days, previous date is deleted automatically.  
( Range : None use, set from 1 ~ 120days )

## Default Setup




Set Factory default except HDD disk, Language, Time, Network IP information.

## Upgrade

The DVR is upgrade latest firmware easily whenever release new function and revert function. .



[1] USB : After copy the firmware in USB memory, insert USB memory in USB1 or USB2.  
The system is re-boot automatically when the system is upgraded .

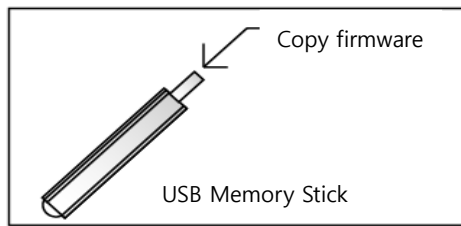

**[Note] It may take 1 min ~ 1 min 30 second, Please wait till system rebooting.  
Do not turn off power or remove USB stick while backup is being procedure.  
It may cause failuar or malfunctioning of system.**

[2] Configuration BACKUP : Back-up DVR configuration in USB memory.

[3] Configuration LOAD: Down load desired DVR configuration in other DVR .

## Button Setup

Operation button (Front button, Mouse Button, Remote button), is for Auto key lock function and Button Beep function.



[1] Auto Key Lock : It prohibits button use.

- ON : it lock function if it doesn't enter desired password in limited time. It has to enter desired password to use function again.  
( Except, Select Channel, Split Image, Auto Sequence )




(Change to Lock Key mode.)

- OFF : Not use Auto Lock Key.

[2] Button Beep : Beep sound whenever pressing any key.

## Lock out



Press  or "LOCK" for a second in live, it change to Lock out.

## Serial Port Setup (RS-485)

Serial port set up is for other devices such as PTZ, Keyboard and so on.



[1] RS-485 port for "Keyboard", "PTZ" and so on, the devices installation are different, have to refer to the devices's manual.

## Chapter 5. Display

### OSD

Set display status



- [1] Alpha Blending : Set Menu transparency.
- [2] Camera Title : Indicate camera title.
- [3] Status Bar : Indicate DVR status  
(Status bar : indicate status Icons in bottom of screen)
- [4] Multi Screen Border: Mark gray color Screen border line in screen.

### Split Mode

Split screen 4 to 16 split screen, the user can decide desired split mode and desired channel.

**[Note] Change to split mode pressing "MULTI CH" in front of DVR board in Live.  
Channel Group is changed in sequence pressing "MULTI CH" button.**

### Select Split mode

Split 16 mode (16CH DVR)



- You select 16CH division mode and click "SPLIT" button to see 16CH display.
- If you want to change the channel number of selected window, click on mouse button or use scroll bar

#### **Sprit 13 mode (16CH DVR)**



- You select 13CH division mode and click "SPLIT" button to see 13CH display.
- Change to Channel group pressing "SPRIT GRP" in Live.  
(Adjust other split mode in the same way)
- If you want to change the channel number of selected window, click on mouse button or use scroll bar

### Split 10 mode (16CH DVR )



- You select 10CH division mode and click "SPLIT" button to see 10CH display.
- If you want to change the channel number of selected window, click on mouse button or use scroll bar

### Split 9 mode



- You select 9CH division mode and click "SPLIT" button to see 9CH display.
- If you want to change the channel number of selected window, click on mouse button or use scroll bar.



### Split 8 mode



- You select 8CH division mode and click "SPLIT" button to see 8CH display.
- If you want to change the channel, click on mouse button or scroll bar to change.

### Split 6 mode



- You select 6CH division mode and click "SPLIT" button to see 6CH display.
- If you want to change the channel number of selected window, click on mouse button or use scroll bar.

### Split 4 mode



- You select 4CH division mode and click "SPLIT" button to see 4CH display.
- If you want to change the channel number of selected window, click on mouse button or use scroll bar.

### Auto Sequence

Auto Sequence is a function that switches video automatically by set time.

(\*Once it is set, it operates by remote control or "SEQ" button on the DVR front.)



[1] Auto Loss Skip: This function skips channel with no video input..

[2] CH1 ~ CH8: Choose channel group (Channel can be different by model.)

[3] Dwell Time: Time can be set in auto sequence in order of channel. (Range: 1sec~30sec.)

## Display Control



### [1] Monitor: Icon setup menu

- Small: choose this in case you use small monitor
- NORMAL: choose this when you use normal monitor
- VGA: this is used when it is VGA or LCD monitor.

#### [Note]

Choose **small, Normal** mode for **CRT** Monitor

서식 있음: 글꼴: 굵게

서식 있음: 글꼴: 굵게

서식 있음: 글꼴: 굵게

서식 있음: 글꼴: 굵게

서식 있음: 글꼴: 굵게

### [2] VGA: VGA resolution setup

- 800x600, 1024x768, 1280x1024

## Chapter 6 — Network

### IP Address

In order to set up the system or do monitoring from remote area, you have to set the network system in DVR.

The user must know whether their internet is dynamic IP(DHCP) or static IP. Please check it to your ISP before setup.

#### [Note] The difference between the dynamic and static IP!

- **Dynamic IP:** Internet line most of people are generally using and it is widely used. It does not have fixed IP address which makes difficult to access from outside. People can access if there is a server that gives the address separately. This unit supports Dynamic IP as separate server is being operated.
- **Static IP:** It keeps specific IP in the internet line. As it has one and only address in the world you can easily have an access.



[1] DHCP : If you are an Dynamic IP user, please set it to "ON". If you are an Static IP user, please set it to "OFF".

[2] IP Address: Don't need to enter address if you are a Dynamic IP user. But if you are a Static IP

user please input as the following example. If the network line is Static IP, please ask your Internet Service Provider(ISP) for the information and input.

[Example]

- IP Address: 192.168.001.050
- Subnet Mask: 255.255.255.000
- Gateway: 192.168.001.001
- DNS Address: 168.126.063.001

[3] DDNS Address: This is a DDNS server address for Dynamic IP user. Please do not change.

The port is basically 3000.

- This has nothing to do with Static IP user.
- Factory default DDNS address is 115.068.007.022

**[Note] If dynamic IP user uses the router, the user should do the port forwarding, Please consult the manual of the router for port forwarding..**

[4] The bandwidth can be selectable as the network speed for smooth image streaming..

- High: it transmits current video quality.
- Middle: It transmits in middle level from current video quality.
- Low: It transmits in low level from current video quality.

☞ 3 different level of Bandwidth can be additionally adjustable.

[5] Additional Transmission Mode

- Use: Max 120fps can be transmitted through the internet
- Non-use: Max 480fps can be transmitted through the network..

## Alarm Alert Set-up

When event occurs or there is a change in the system setup, it will send those information to registered address in the unit.

## E-mail Setup

Please be cautious of setting If the setup is wrong, It may not send you any alert emails.



- Mail Server (SMTP SERVER): Mail sending server. Input the mail server address of user. Input the send mail(SMTP) address. If you are not sure, please contact your mail server manager.
- PORT: Most mail server use port 25 so, if it doesn't work, please check the port No.
- Mail(E-Mail) Address: Input the e-mail address of receiver (Max. 4 people)
- Password: Set it whether to use or not.



- ✓ On / Off: Set to "Off" for sending mails without certification. Set it to "ON" in case you need password and input the followings.
- ✓ If you set it to "Off", user ID, password should be input.

## Alert Alarm Types

Choose when to send an email.



- Mail: When sending email, the email with this title will be sent.
- Interval: If you make the time setup in event cases, the DVR doesn't send the e-mail repeatedly during the selected duration. It is to prohibit the mass e-mail sending in frequent events
- Sensor: An email will be sent when sensor input is triggered.
- Motion Detection: An email will be sent when motion is detected.
- Video Loss: It sends an email when video input is disconnected.
- Power On: It sends an email when power is input to the system.
- Password Modify: An notification email will be sent when system password is changed.
- HDD ERROR: An notification email will be sent when when HDD error is found.

## Chapter 7 — Camera

### Camera Setup

You can set up the usage of camera and color setting.



[1] Channel: Choose a channel to set up.

[2] Covert: It hides the video if you set to "On".

- On: Use
- Off: Not use

[3] AGC (Automatic Gain Control): It prevents too much strong signal controlling Gain and it helps with proper brightness in accordance with camera output signal.

[4] Static Gain: This amplifies camera input signal according to the Gain..

If the video is displayed dimly, it increases Gain, if the video is displayed brightly, this will decrease the Gain for right amount of Gain.

[5] Brightness: controls brightness and darkness.

[6] Contrast: controls contrast of black and white of video

[7] Hue: level of color or hue.



## Camera Title

Input Camera name.



If you click on channel, input panel will pop up.

## PTZ Set-up

In this menu, you can set up about PTZ camera.



You should set whether or not to use Pan/ Tilt Camera and protocol. (Default is D-Max Protocol)

- Channel: Select a channel to connect.
- Serial Port: Choose RS-485.
- Model: Select PTZ model.
- ID: Select Pan/ Tilt ID. (Refer to the instruction manual of Pan/ Tilt manufacturer.)

## Advanced

PTZ detailed setup is applied some specific models.



- [1] Pan Speed: Movement speed of right and left.
- [2] Tilt Speed: Movement speed of up and down.
- [3] Zoom Speed: Speed control of zoom
- [4] Focus Speed: Speed control of focus
- [5] Reverse Control(Pan): If you set to on, it will move to reverse direction of right and left.
- [6] Reverse Control(Tilt): When you move it up or down, it moves to opposite direction.

### **[Note] Select PTZ protocol**


**Protocol is PTZ moving driver. The protocol is registered as camera model name or protocol name. Please check whether your PTZ is usable for this DVR**

## How to use PTZ

### How to call PTZ menu

Before you use this function, camera must have been installed and DVR setup must have been set.


- (1) Calling Menu from DVR Front: Select the channel that is connected to PTZ. Press PTZ button and "+" sign will appear.

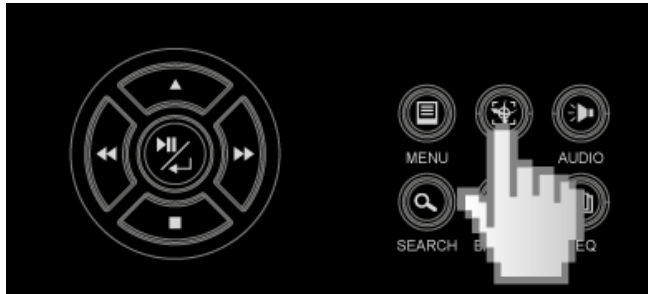


(2) Calling Menu using Mouse: Select channel that is connected to PTZ camera and click on right button of mouse. Then click on PTZ icon. "+" sign will show up.



(3) Calling Menu from Remote Control: Select channel that is connected to PTZ. Then press "PTZ" button on the remote control. "+" will show up on the screen afterwards.

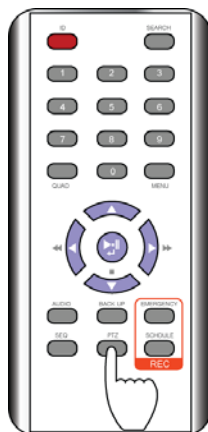


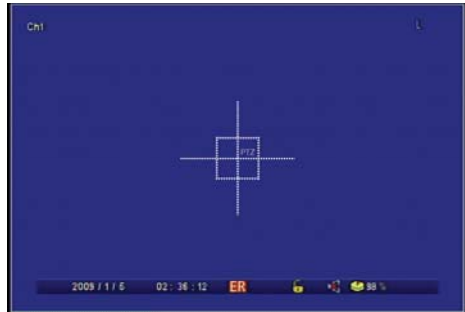

(PTZ Control View)


## How to operate PTZ

(1) Operating from Front key

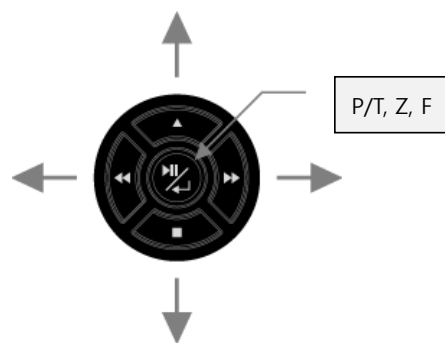


- Operate the PTZ by using direction keys as above.
- Whenever you press "confirm"(Enter) key, menu changes and operate using left or right key.
  - P/T: Move PTZ camera
  - Z: Zoom in or out
  - F : Focus control

(2) Operating by Mouse

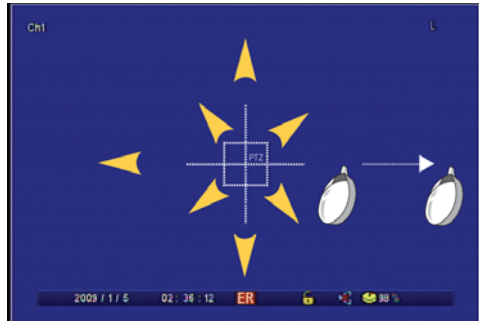

- When you use mouse, drag the mouse from inside to outside. If the mouse is moving farther away from center, the speed becomes faster.
- Whenever you turn the mouse scroll, menu changes and control by moving to left/ right direction.
  - P/T: Move Camera
  - Z: Zoom in /out camera
  - F: Adjust Focus


### (3) Operating by Remote Control

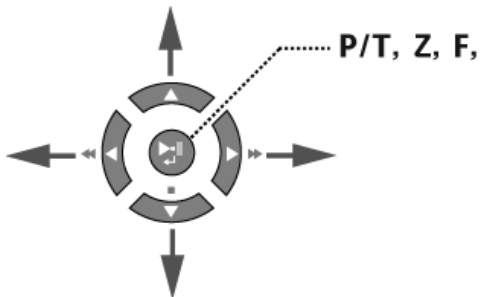

- The camera can be moved by direction key.
- By pressing the 'enter' key, the menu changes then, select right/left.
  - P/T: Move camera
  - Z: Camera Zoom In/ Out
  - F: Adjust Focus

### Advanced Pan/ Tilt Menu

After you call Pan/ Tilt menu, click it on once again. Then advanced menu will show up.

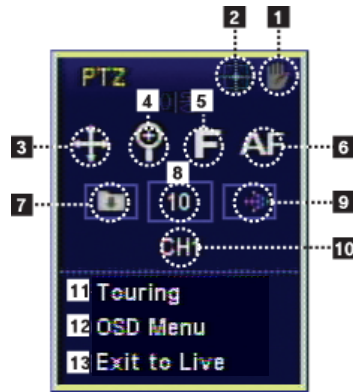

- (1) In front button or in remote controller, if you want to change the pop-up location of advanced menu, move to right/left. (If you use mouse, you can drag it.)
- (2) Choose wheter to let "+" sign appear on the screen or not.
- (3) If you choose Pan/ Tilt mode, camera can be moved.
- (4) It converts to enlargement/ reduction mode of PTZ.
- (5) It converts to camera focus mode.  
(Articles 3, 4, 5 above can be converted by confirm (Enter) key without calling advanced menu.)
- (6) Auto Focus.
- (7) Save preset number.
- (8) Select preset number to save.
- (9) Camera moves to appointed preset number.
- (10) You can change the PTZ camera channel.
- (11) It tours all preset numbers in order of storage.
- (12) It calls PTZ camera menu from the PTZ camera itself.
- (13) It ends the PTZ mode. (or press "Menu" key several times.)

## Chapter 8 — Recording

### Recording

Set up recording resolution, frame and quality of each channel. Please be cautious when setting up as it records according to the set size or quality of image.



[1] Pre-Recording

If you set it to "ON", you can let the DVR start recording about 5 seconds in advance of event.

[2] Channel: Select a channel to set. (if you want to apply to all channels, choose "All Channel".)

[3] On / Off: Choose a channel you want to apply. If you set it to "ON", it will not record at all even though cameras are connected.

[4] Resolution: Set recording resolution.

[5] Speed: Choose frames to record.

[6] Quality: Select recording video quality.

[Quality] HIGHEST > HIGH > NORMAL > LOW > LOWEST

[7] Post-Recording: Set the duration time after event is finished.

[8] Record Audio: Select a channel for audio recording.

## Schedule Recording

It is a function that reserves recording by day, time and channel. You can set it by an hour.



- None: does not record
- Continue: always record
- Motion: it records when motion is detected.
- Sensor: it records when sensor is detected
- Motion + Sensor: it records either sensor or motion is detected.

[How to set]

[1] Select a channel.

[2] Choose day/ time and the event color will change every time you press "Confirm" key.



[3] Whenever you choose another day or time and press "Confirm" key, event color behind the



current location will change.

[4] Delete: It deletes selected schedule of the day.

[5] Copy channel: It copies the current recording schedule to designated channel.

[6] Copy all channel: It copies all current schedule of the week to all channels.

[7] Holiday(H): Holiday is all different by country. So you should separately set.



You can set holidays like above image. Please click on "H" first and calendar will pop up.

Using direction key, move to a number you want to set for holiday and press "Confirm"(Enter) key.

Then it will be highlighted in red color. Once you set your country holidays, all of them will be recorded as you set.


**[Note] When using a mouse,**

**If you use a mouse, you may want to choose event (  N  C  M  S  M+S) first and drag to the day you want, which is easier way to set.**

## Chapter 9 — Event

### Sensor

You will learn how to connect sensor and set. The unit supports 4 sensor inputs regardless of model.

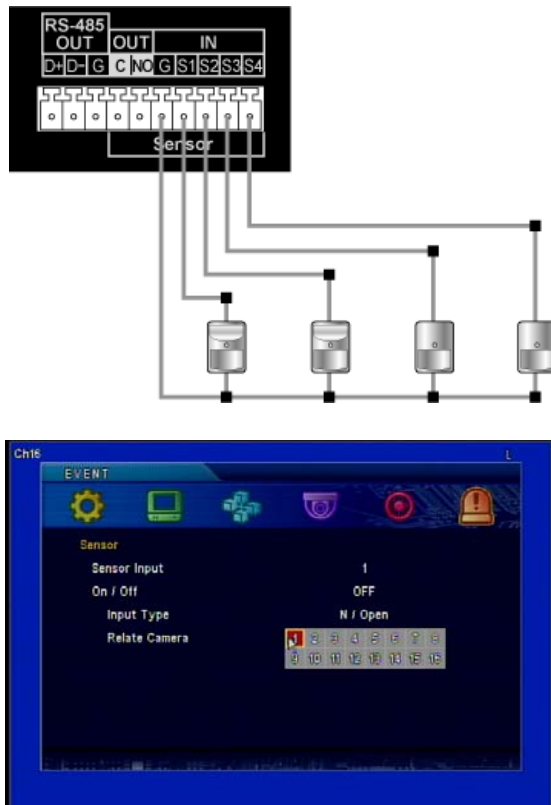

\* Connecting camera might appear differently by 9/ 16Channel.

[1] Sensor Input : Select channel for sensor input.

[2] On / Off : If you want to use the sensor, set it to 'On', or 'Off'.

[3] Input Type : Select a type of contact point.


- N/Open (NORMAL OPEN) : It is normally open but the alarm will go off when the sensor input is connected.
- N/Close (NORMAL CLOSE) : It is normally closed but the alarm will go off when the sensor

input is disconnected.

[4] Related Camera : Connecting with the sensors, choose a camera to record and multi cameras can be chosen.

## Alarm

This unit supports only 1 alarm(Relay) output. In this chapter, you can learn how to connect Alarm and set.

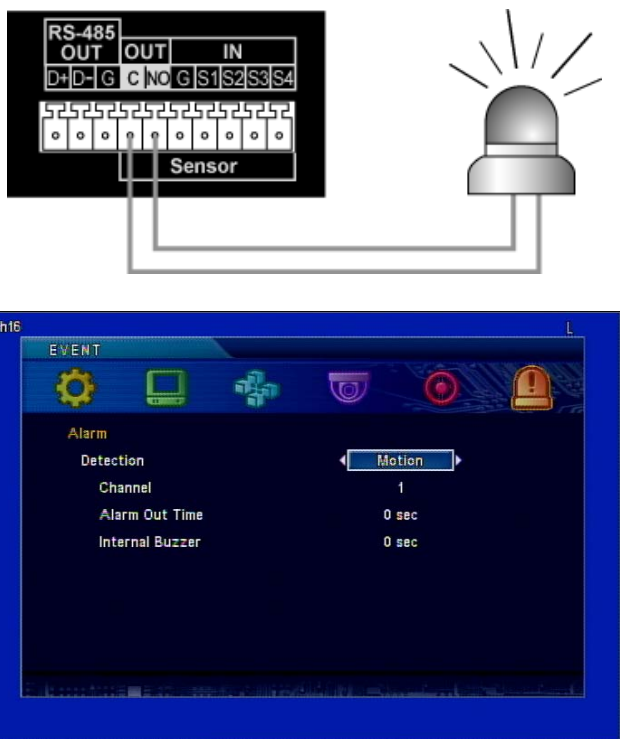

[1] Detection : Choose a way to trigger the alarm.


[2] Channel: Choose a channel for alarm output.

[3] Alarm Out Time: You can set alarm output time. (1~30sec.)


[4] Internal Buzzer: Internal Buzzer Time can be set. ( 1~30sec.)

## Motion Detection

It is a menu that you can set up motion detection menu. In this function, you can set area and sensitivity when motion is detected on the image.

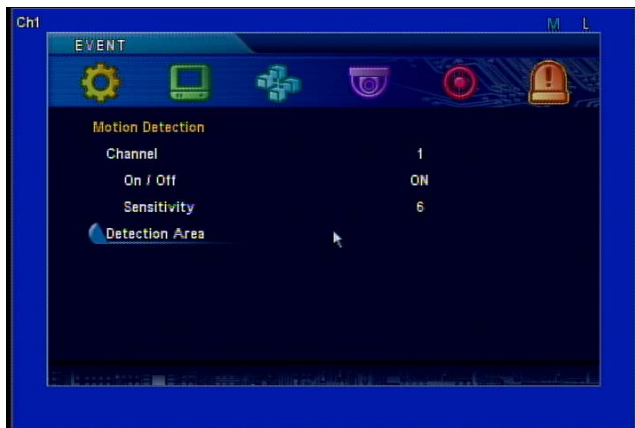

- [1] Channel: Select a channel to set Motion Detection
- [2] On / Off: Choose On or Off whether you will use the function or not.
- [3] Sensitivity: Set up the sensitivity. ( 1~10sec.)  
( \*Before applying sensitivity, check out reaction to the sensitivity.)
- [4] Detection Area: Set up area you want

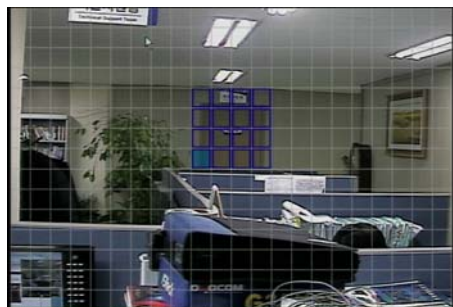

Use Up/ Down/ Left/ Right key to set. Press "Enter" to select.

- Selected motion area: borders in blue

- Unselected motion area: nothing appear (transparent)
- Motioned detected area will be shown in red color.

**[Apply to all] You can easily select or unselect all areas using one key.**

**Button "1": Select All**


**Button "2": Release All**

**[Using Mouse]**

**Place the pointer on starting point. With the right button pressed, drag to ending point and release.**

## SPOT Output

Using extra monitor, you can observe better. 'Spot Output' will automatically show each video channel in sequence. You can give each video channel time or particular channel will pop up on event..

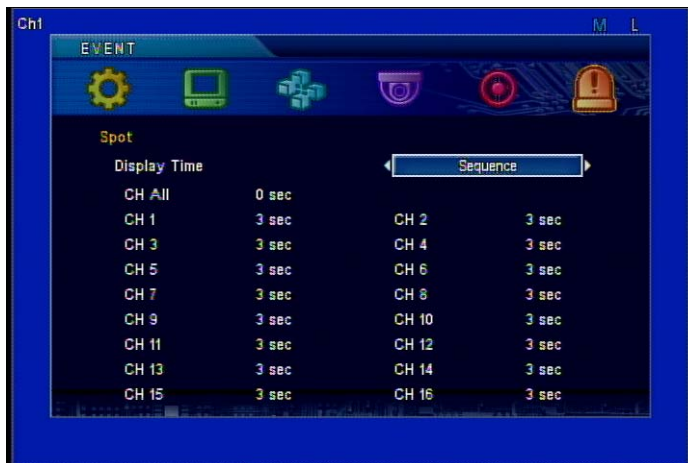

[1] Display Time: Select the output mode.

\* If you set it to any channel fixed, the selected channel will be displayed at all times.

- Sequence: videos will be displayed in sequence of channel number.
- Event: channels with event outbreak only will be displayed.
- Seq + Event: it displays videos in sequence of channel number but if event occurs, event channel will preferentially pop up.

[2] Time: Dwell time between channels can be set.

## Audio Output

If the microphone is connected to the DVR on site, you can listen to the audio sound in live or search mode. The audio listening is possible in multi-screen mode as well.



[1] Menu Call: If you select the "AUDIO" during the live or search mode, the audio output menu show up. The menu call is possible from the front key, remote control and mouse.


[2] Select Mode

- Off: No Audio output.
- CH1: Audio Output from CH1 only
- CH2: Audio Output from CH2 only
- CH3: Audio Output from CH3 only
- CH4: Audio Output from CH1 only
- Auto: Audio Outputs from selected channels only

## Chapter 10 — Search

### Search

The unit can record for a long time but also you can easily search video clips you are looking for by adjusting some conditions. So you don't have to sit on a chair all day long to find videos you want. Search can be made by time, motion, sensor etc. These methods will be often used. So it will be convenient for you if you learn it by heart.

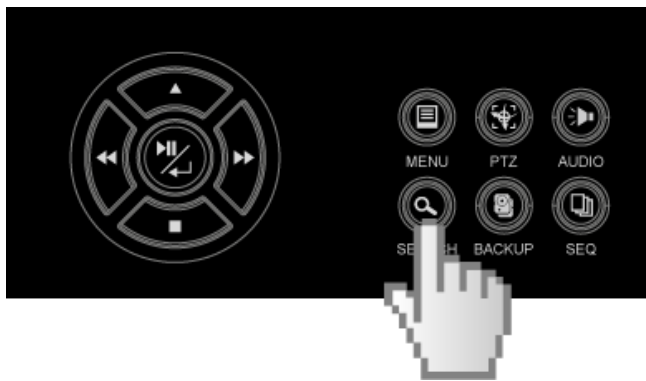

[1] How to call Menu: Press "SEARCH" button on the front or remote control or mouse menu.

[2] Select Search Mode



- Search by Calendar: You can use this search if you don't know exact time.

- Search by Date/ Time: You want to use this when you know the time..
- Search by Event: This mode is used to find the recorded image by event.
- First Search: The first data recorded in the hard disk will play.
- Last Search: The last data recorded in the hard disk will play.

## Search by Calendar

It searches by calendar and multiple videos will be displayed when you use this calendar search.

- [1] If you confirm calendar search, when DVR brings the recorded information, calendar will be shown. If you see numbers in red, it means there are recorded datas on the red-colored date. You can change year/ month/ day by using direction key..



- [2] Recorded data by time/ channel on the relevant date will be shown up in graphs. Select time and press enter. (Channels are displayed differently by model.)





[3] Recorded data of relevant time will be displayed in graphs. Choose minute .by pressing enter key. (Channels are indicated differently by model.)



[4] Based on the chosen year/ month/ day/ time so far, the screen will be converted to 'Play back' mode.

### Search by Date / Time


If you know of exact date and time, you can directly input and immediately play back..



- [1] Start Recording: From recorded data, it indicates first time.
- [2] End Recording: From recorded data, it indicates ending time.
- [3] Channel: Select a channel to play back or all channels.
- [4] Play Begin: Choose date/ hour/ minute.
- [5] Play: It plays back according to selected date.


## Search by Event

It helps you find the recorded data by event from the selected date.

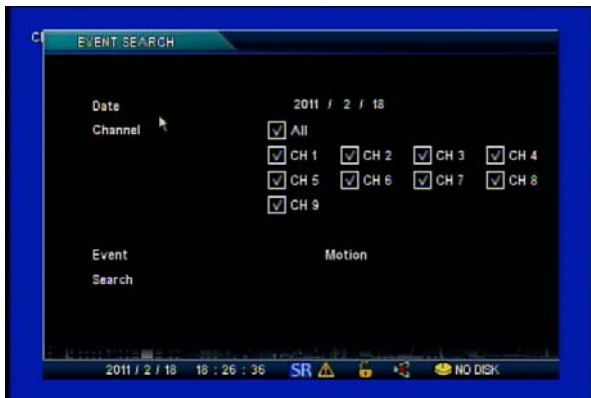

- [1] Date: Input date you want to search.
- [2] Channel: Select channel you want to look up. (Channel display is different by model.)
- [3] Event: Choose event type you want.

[4] Search: If everything (date, channel, event type) is chosen, start searching in these conditions.

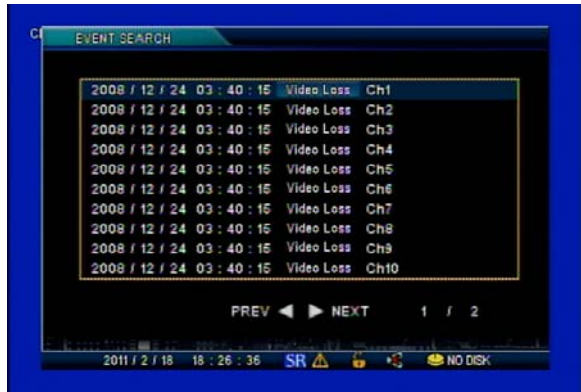


[5] As above image, if you click on anything from above, it will immediately play back.

### First Search / Last Search

From recorded date in HDD, the first or last recorded data can immediately play back.

### How to control playback


The followings are explanation of useful functions during playback.

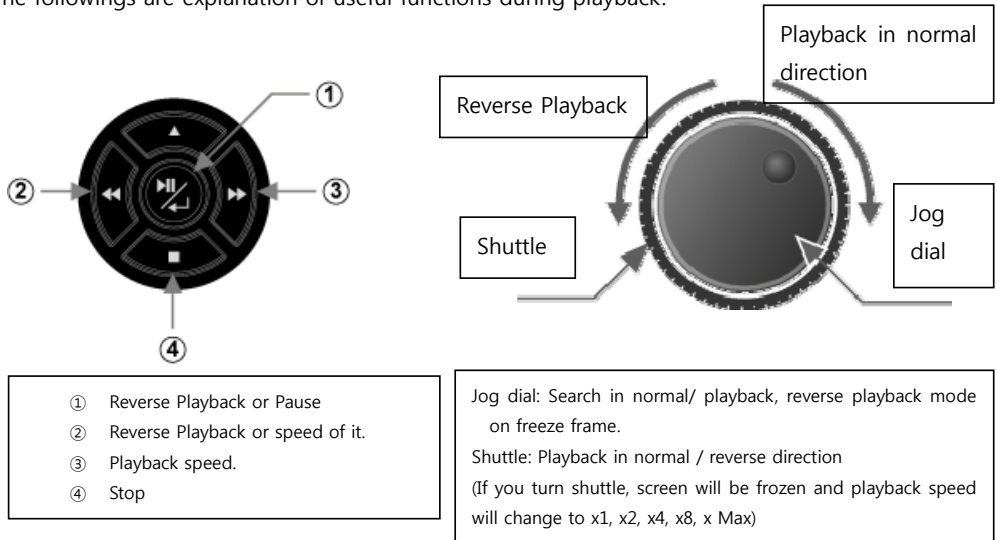

[Controlling from Front panel]

[Controlling Jog-shuttle]

[Using Mouse]

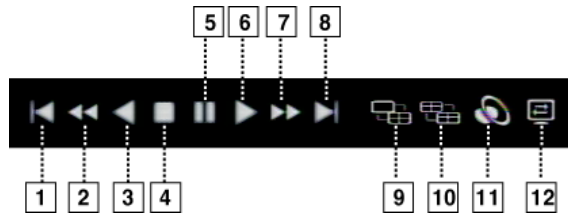

[1] Reverse to 5mins back and play

[3] Playback in normal direction

[5] Pause

[7] Speed Control of Playback

[9] Change deivision mode

[11] Listening to Audio

[2] Speed control of reverse playback

[4] Stop

[6] Playback

[8] Move 5mins forward and play

[10] Change division group

[12] Change De-interlace mode

※ De-interlace: When you play back recorded image in 704X480 size, if the fast-moving picture is trembling, de-interlace mode will compensate.

## Chapter 11 — Back-up

### Back-up


After you select requested data, you can save it in external equipment (USB or ODD). When the data is saved, viewer program will automatically be saved. So you can conveniently view the back-up data anywhere.

- (1) Connect back-up device (USB / ODD) to the DVR.  
(Insert empty disk in case of ODD.)
- (2) If you press "BACKUP" button, the following menu will pop up.



\* Channels indication are different by model.


- (3) Select "USB" or "CD/ DVD" from back-up device.
- (4) Input back-up starting time and ending time.
- (5) Channel Select: Select channels to back up. (Selected channels are indicated in red.)
- (6) If the setup is done, press "Backup start"..

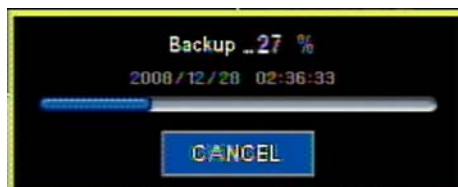

(7) If back-up is properly done, you will see a file as below in USB memory stick and it will play video clip if you click on it.



(8) How to use Viewer program. (it will automatically run when you click on backup video file.)

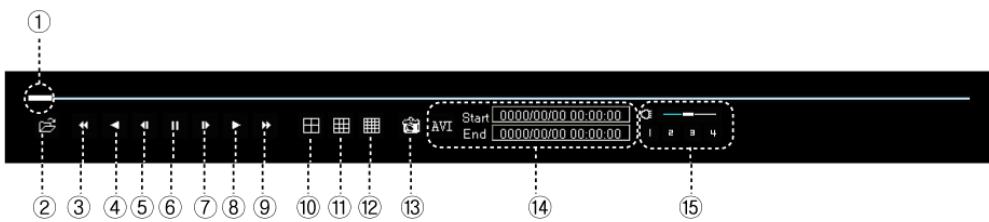

- ① Scroll Bar: It indicates where you are located in the whole data.
- ② Open: It is used to see another backup file.
- ③ Reverse playback
- ④ Fast Reverse Playback
- ⑤ Play backwards frame by frame
- ⑥ Pause
- ⑦ Play forward frame by frame
- ⑧ Play
- ⑨ Fast play forward
- ⑩ Quad view
- ⑪ Split into 9 screens
- ⑫ Split into 16 screens
- ⑬ Capture the current image
- ⑭ It is used to convert into AVI file. If you click on any part from "Start" and "End" section respectively, time will automatically be input. Then if you click on "AVI" key, it will be converted.
- ⑮ If you click on any number, you can listen to sound of relevant channel.

## Chapter 12 — Appendix

### SPECIFICATION

Screen Display		9CH	16CH
Operating System		Embedded Linux	
Compression		H.264	
Audio Algorithm		G723.1	
Video System		NTSC / PAL	
Video In/output	Input	9Ch	16Ch
	Output	Loop Out (4/9/16 ), Composite (1), Spot(1), S-VHS(1) VGA(1)	
	Mode	Compact TV, CCTV, VGA Monitor	
Live		Real Time Live	
Split Screen		1, 4, 6, 8, 9	1, 4, 6, 8, 9, 10, 13, 16
Recording Resolution	NTSC	CIF( 352 X 240 ), 2CIF(704 X 240), D1(704 X 480)	
	PAL	CIF( 352 X 288 ), 2CIF(704 X 288), D1(704 X 576)	
Recording Frame	CIF	270 / 225 fps	480 / 400 fps
	2CIF	240 / 200 fps	240 / 200 fps
	D1	120 / 100 fps	120 / 100 fps
Recording Mode		Emergency, Schedule, Sensor, Motion, Sensor+Motion, Pre&Post Event	
Search	Mode	Calendar, Date&Time, Event, Start, End	
	Speed	x1, x2, x4, x8, xMax (by minute; 1min, 2mins,3mins ...)	
Audio	In/Output	4/1	
	Volume	Volume Adjustable	
Sensor input/ Alarm Out		4/1	
PORT	RS-232	Keyboard control	
	RS-485	PTZ Control	
	LAN	10/100/1000 Base-Tx Ethernet (RJ-45) - Fixed IP, DHCP & DDNS	
Network Control		Video Dual-Stream ( Local recording & Network Transmission)	
Remote Access	Software	CMS, Network Viewer, IP Viewer, Smartphone App.	
	IE	Web Site Monitoring ( <a href="http://www.livesecu.com">http://www.livesecu.com</a> )	
Backup Device	Internal	ODD BACKUP (OPTION)	
	External	Local Backup by USB Memory Stick & Network Backup by Network Viewer, CMS	
HDD		( 2 x SATA HDD)	

ODD	DVD-RW (optional)
System Operation	Front Keys, USB Mouse, IR Remote Control, Keyboard (Optional)
Other Functions	Multi Language supported
	When inputting camera name, Korean's available.
	Pan/ Tilt are controlled to Mouse's direction
	During backup, Viewer program is automatically saved and the files can bbe converted to AVI
Power	DC 12V 6A
Operating Temperature	0°C ~ 40°C
Dimension	428 mm(W) X 88mm(H) X 420mm(D)
Weight	5.2Kg



# Product Warranty

This unit has thoroughly been tested and passed on quality control & quality assurance. Based on the warranty, If this unit malfunctions during normal use, you will be guaranteed to get your item repaired free of charge under joint agreement based on the warranty.

[Tips on warranty].

- Check out the Warranty first.
- Check the item again what is wrong with it and contact the seller of this unit.

[Warranty details]

- In only case the unit malfunctions during normal operation, the unit can be repaired for free but within a year from the date of your purchase.
- Repair cost and service charge will be requested in the following cases,.
  1. Failure or damage incurred by user.
  2. Failure or damage incurred by natural disaster.
  3. Failure incurred by user who doesn't abide by the operation manual..
  4. Problem incurred In case appointed power supply (voltage, frequency) is not used..
  5. In case user requests consumable parts.
  6. In case nontechnical expert changes contents of the unit or damages.
- Failure of goods out of warranty(1year) can not be fixed for free but it will be repaired if you are willing to pay for the parts or service..

## Product Warranty

Item Number	
Serial Number	
Purchasing place	
Date of Purchase	
Warranty period	
Customer	Name
	Address

- ▷ This Warranty can't be reissued.
- ▷ When purchasing this unit, please let the seller fill in the blanks above.
- ▷ If you want to get your items repaired for free, please hand this over.

- For safe use of system and to prevent product failure or accident, please read this manual carefully before use.
- The manual includes the product warranty. Be sure to keep it handy for later reference.